

90-1 TURN/STOP/HAZARD LAMPS

1994 BRONCO/F-SERIES

For diagnostic information, refer to section 17-01 of the Service Manual.


HOT IN RUN

HOT AT ALL TIMES

Provides a pulsating voltage to operate hazard lamps.

Provides a pulsating voltage to operate turn signals.

Allows operator to select right or left signal or hazard.

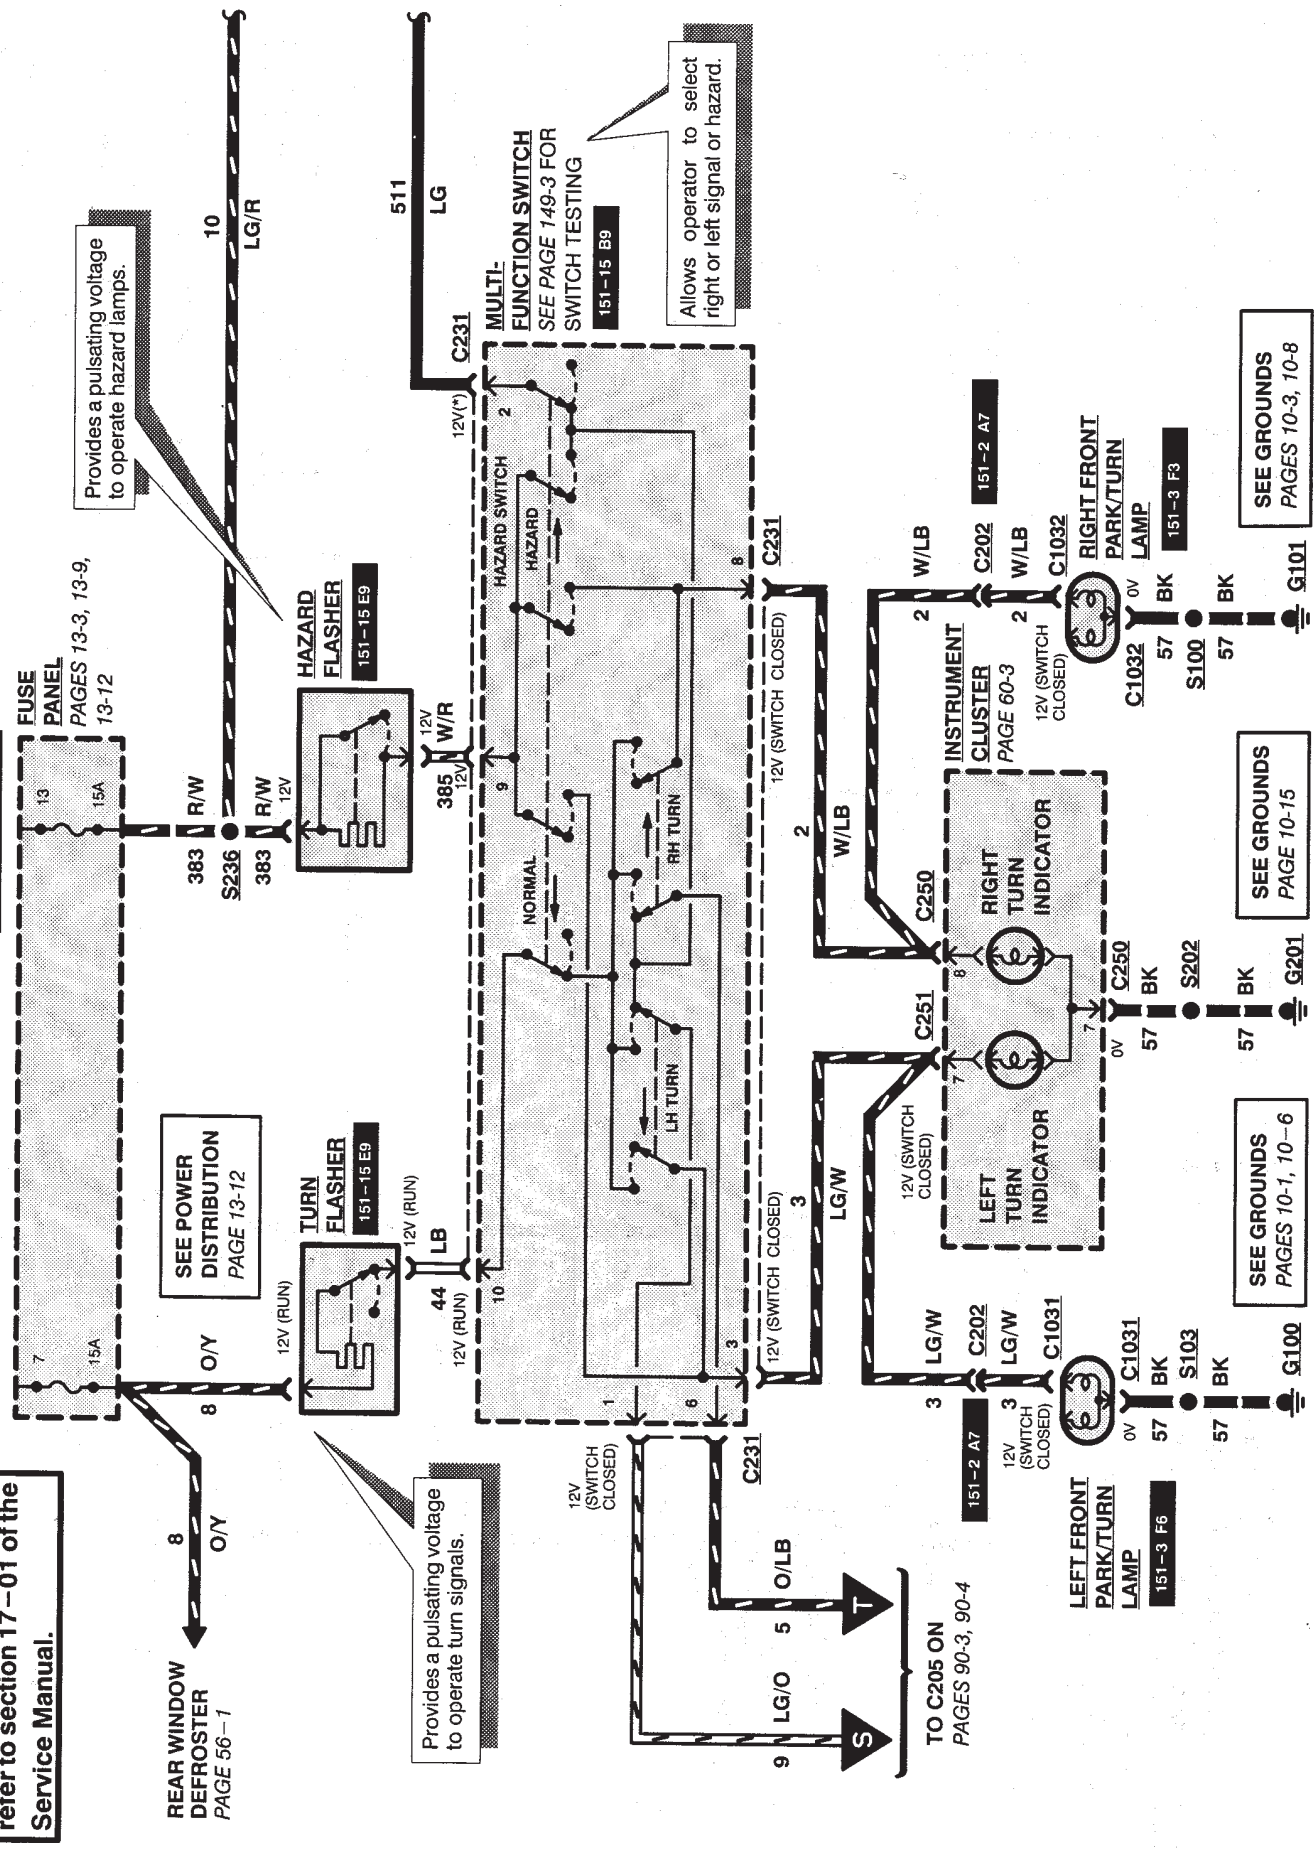

REAR WINDOW DEFROSTER PAGE 56-1

SEE POWER DISTRIBUTION PAGE 13-12

SEE PAGE 149-3 FOR SWITCH TESTING

TO C205 ON PAGES 90-3, 90-4

SEE GROUNDS PAGES 10-1, 10-6

SEE GROUNDS PAGE 10-15

SEE GROUNDS PAGES 10-3, 10-8