

Floor Console


Removal

All vehicles


All vehicles

NOTE: Removal steps in this procedure may contain installation details.


1. Release the clips and remove the RH lower floor console trim panel.
Use the General Equipment: Interior Trim Remover

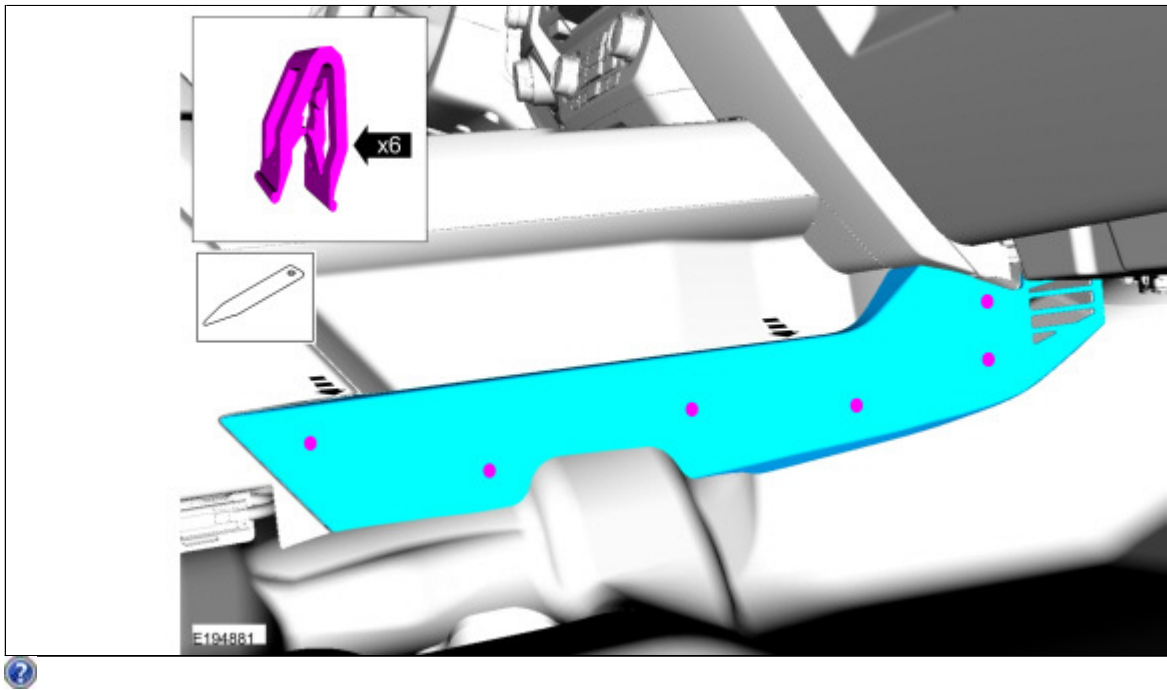


2. Remove the screw, release the clips and remove the LH lower floor console trim panel.
Use the General Equipment: Interior Trim Remover
Torque : 22 lb.in (2.5 Nm)

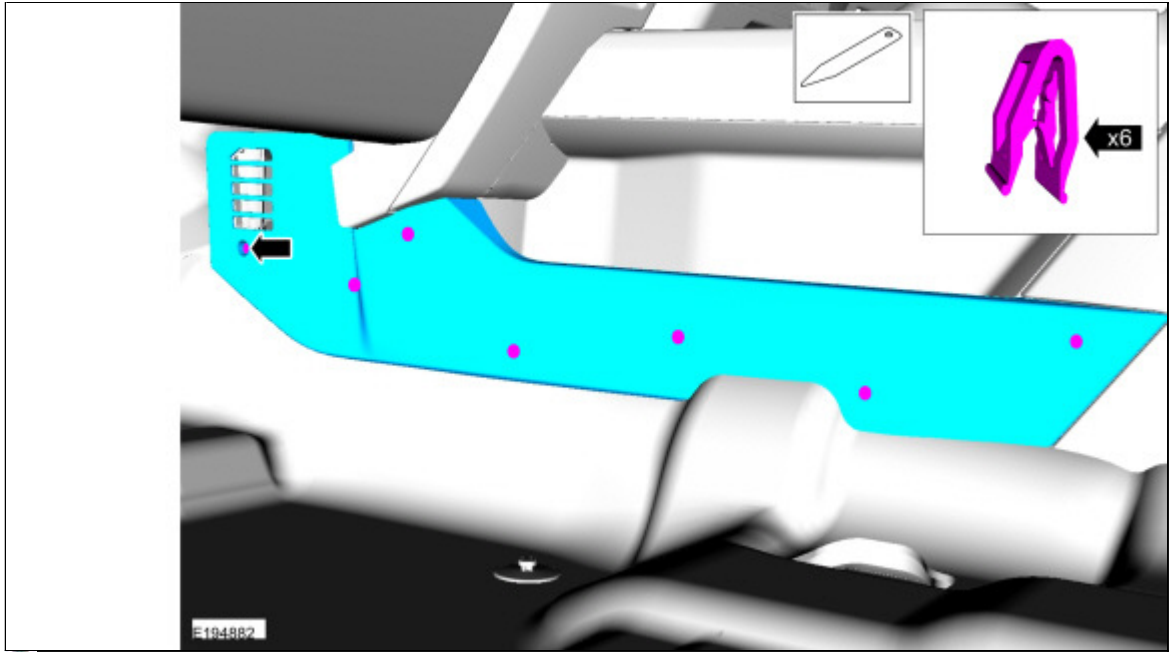

3. Remove the RH finish panel.
Use the General Equipment: Interior Trim Remover

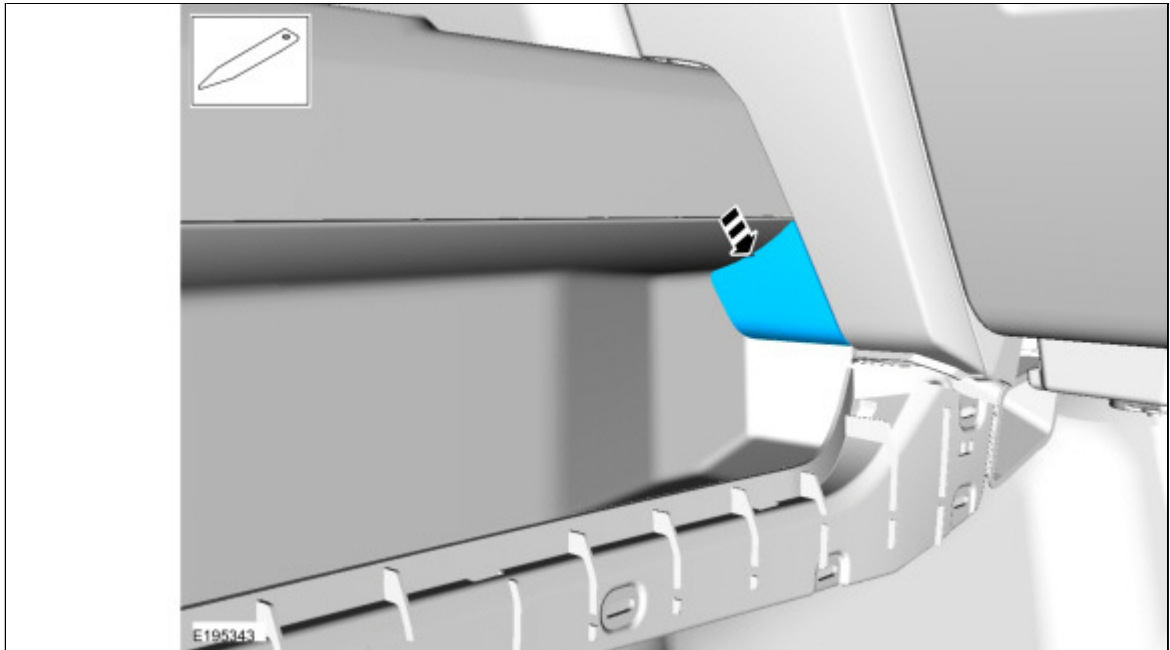

4. Remove the LH finish panel.
Use the General Equipment: Interior Trim Remover

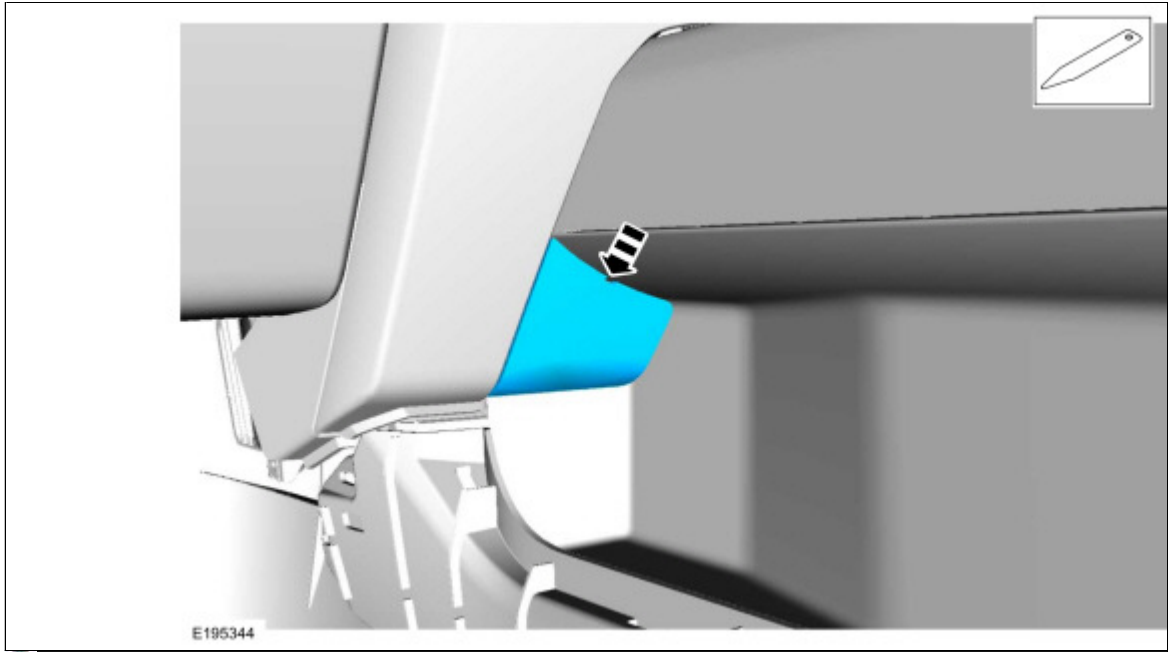

Vehicles with floor mounted selector lever


Vehicles with floor mounted selector lever

5. Remove the selector lever assembly.
Refer to: [Selector Lever Assembly - Vehicles With: Floor Shift](#) (307-05 Automatic Transmission External Controls, Removal and Installation).


Vehicles with steering column mounted selector lever

Vehicles with steering column mounted selector lever

6. Release the clips and remove the floor console trim panel.

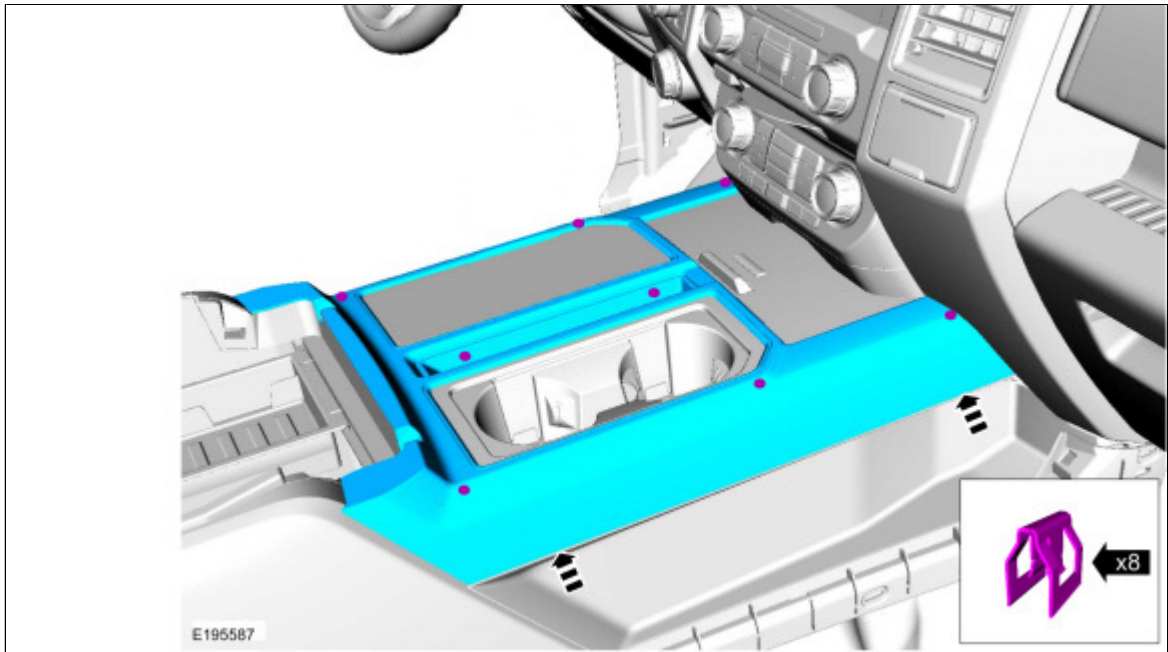

7. Remove the screws, release the clips and remove the floor console upper finish panel.
 - Disconnect the electrical connectors.

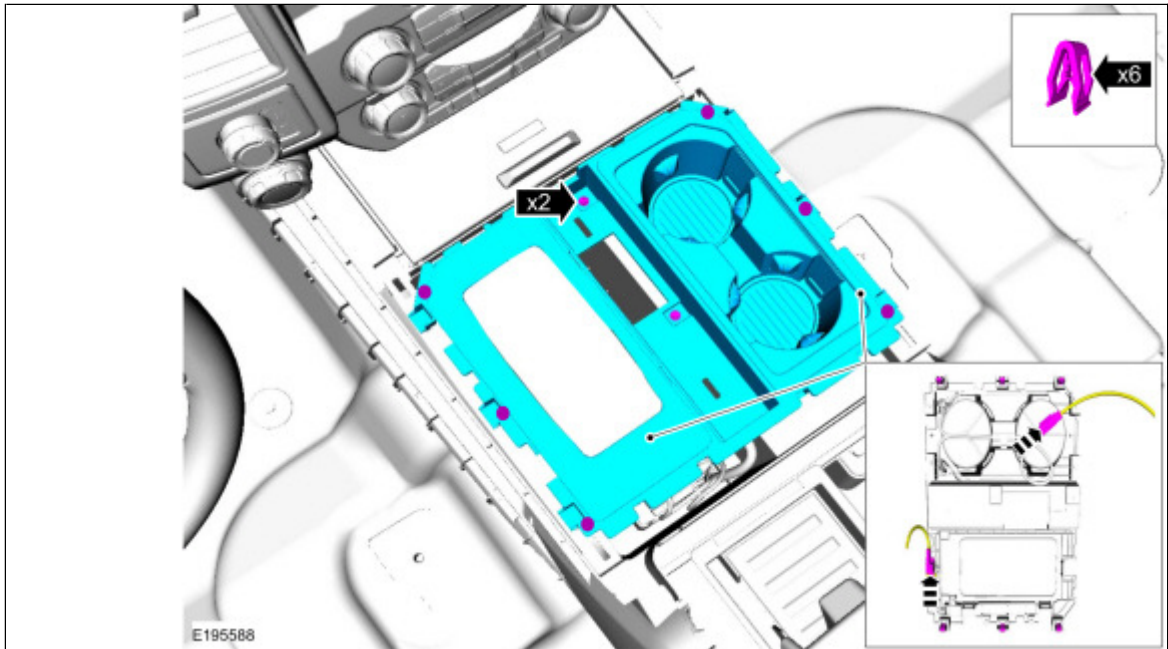


All vehicles

All vehicles


8. **NOTE:** Position the front seats forward to access the rear bolts, and position the front seats rearward to access the center bolts.

Remove the bolts and position the floor console rearward.

- Disconnect the electrical connector.
Torque : 48 lb.in (5.4 Nm)

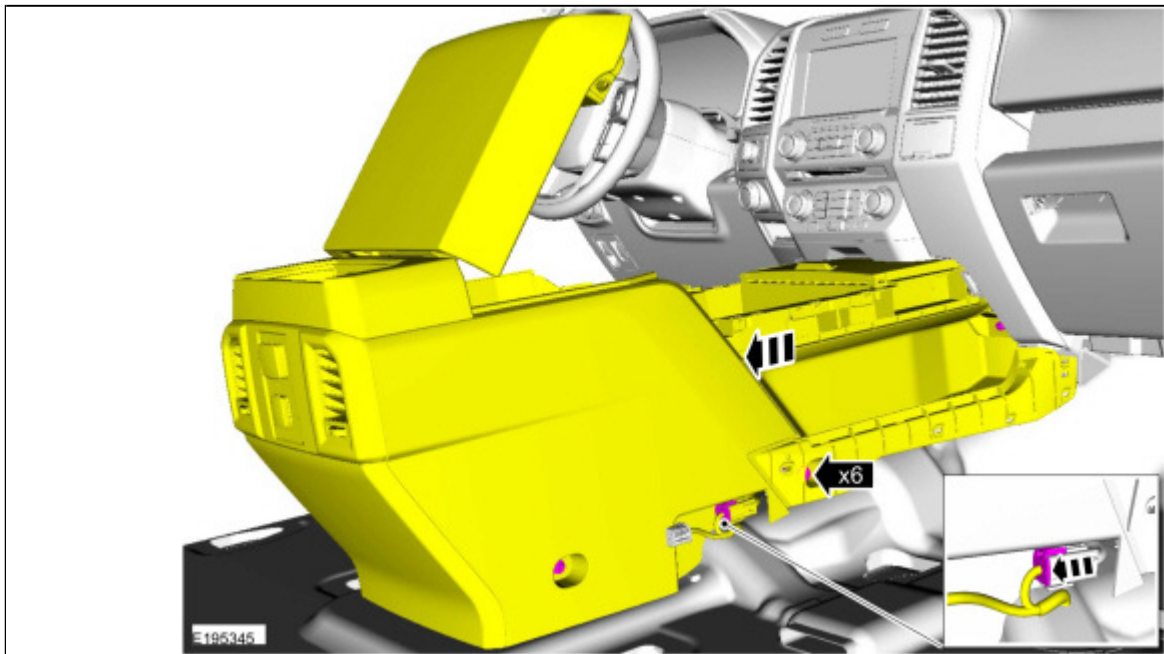

9. Disconnect the electrical connectors and remove the floor console.

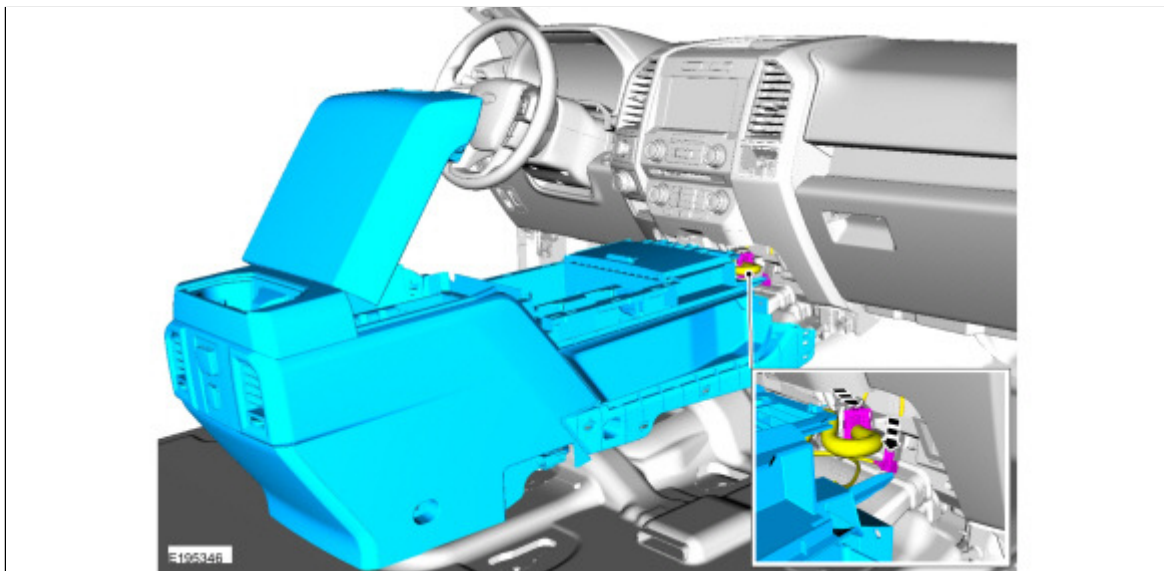

Installation

1. To install, reverse the removal procedure.
