


Selector Lever Assembly - Vehicles With: Floor Shift

Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Open the console.

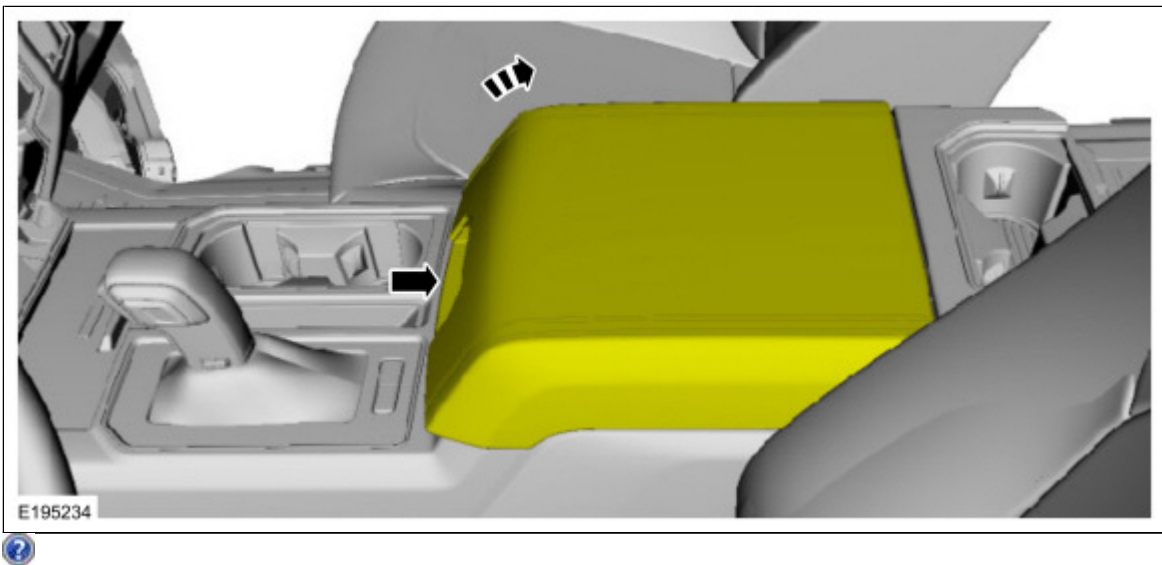

2. Remove the console trim panel.




3. Remove the selector lever bezel.
 1. Remove the screws and lift the bezel to access the selector lever knob boot and the electrical connectors.
 2. Release the tabs and disconnect the selector lever knob boot.
 3. Disconnect the electrical connectors.

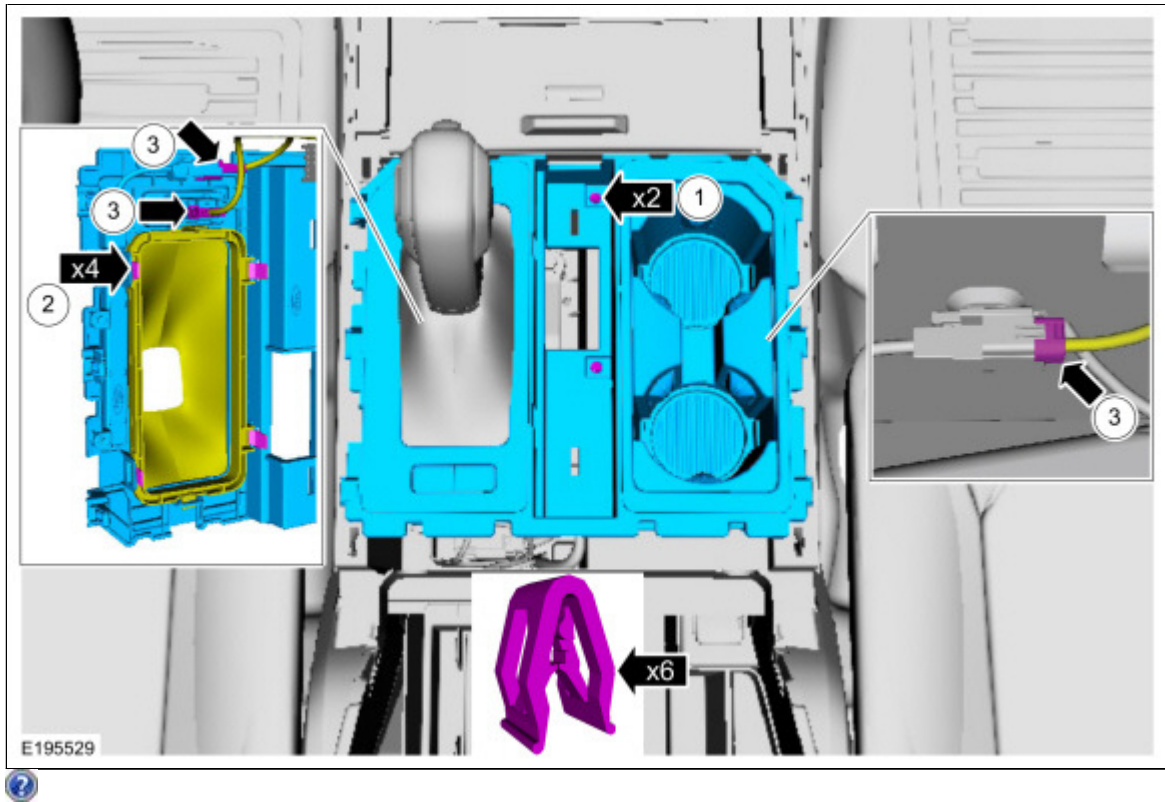


4. **NOTICE:** Moving the selector lever may unseat the selector lever cable grommet. Make sure the grommet is correctly seated during installation.


Remove the selector lever assembly bolts and move the selector lever rearward to access the selector lever cable bolt.
Torque : 89 lb.in (10 Nm)

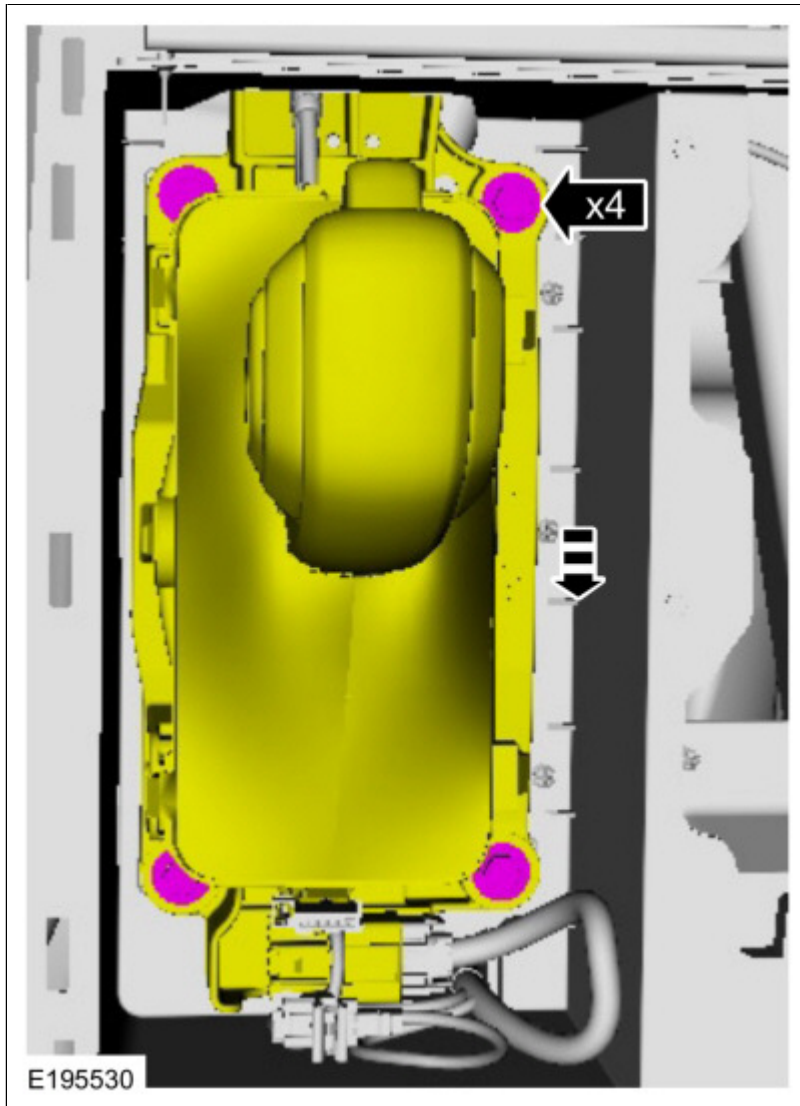


5. Remove the selector lever cable retainer bolt.
Torque : 62 lb.in (7 Nm)

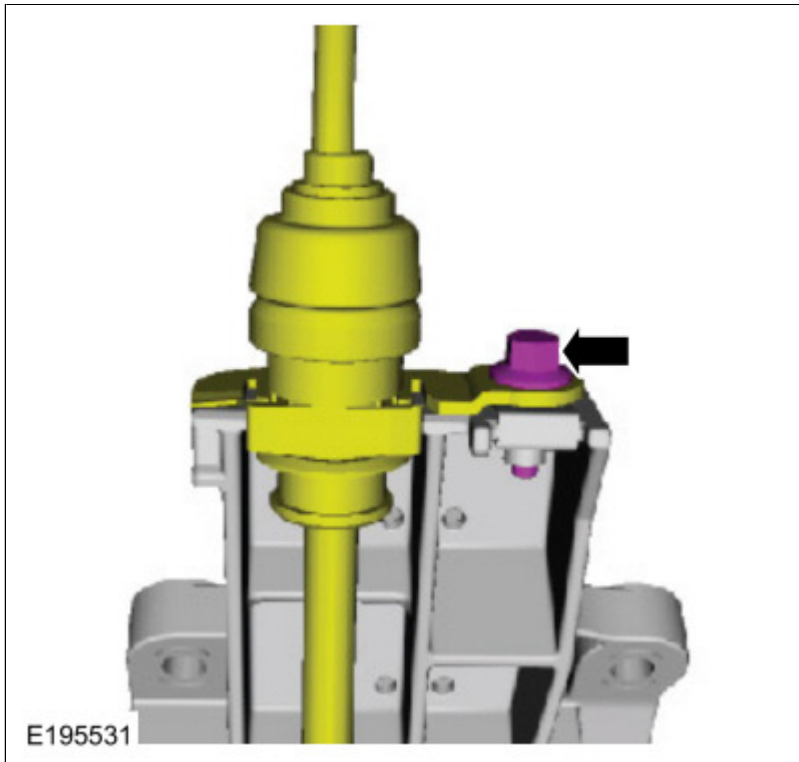

6. Disconnect the selector lever cable from the selector lever assembly.

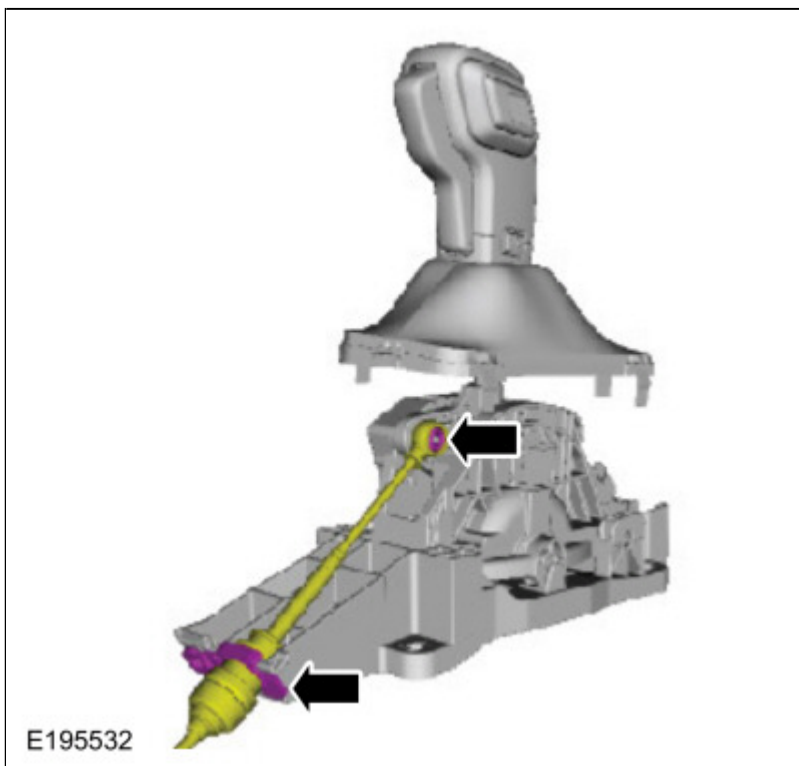


7. Disconnect the electrical connector and remove the selector lever assembly.

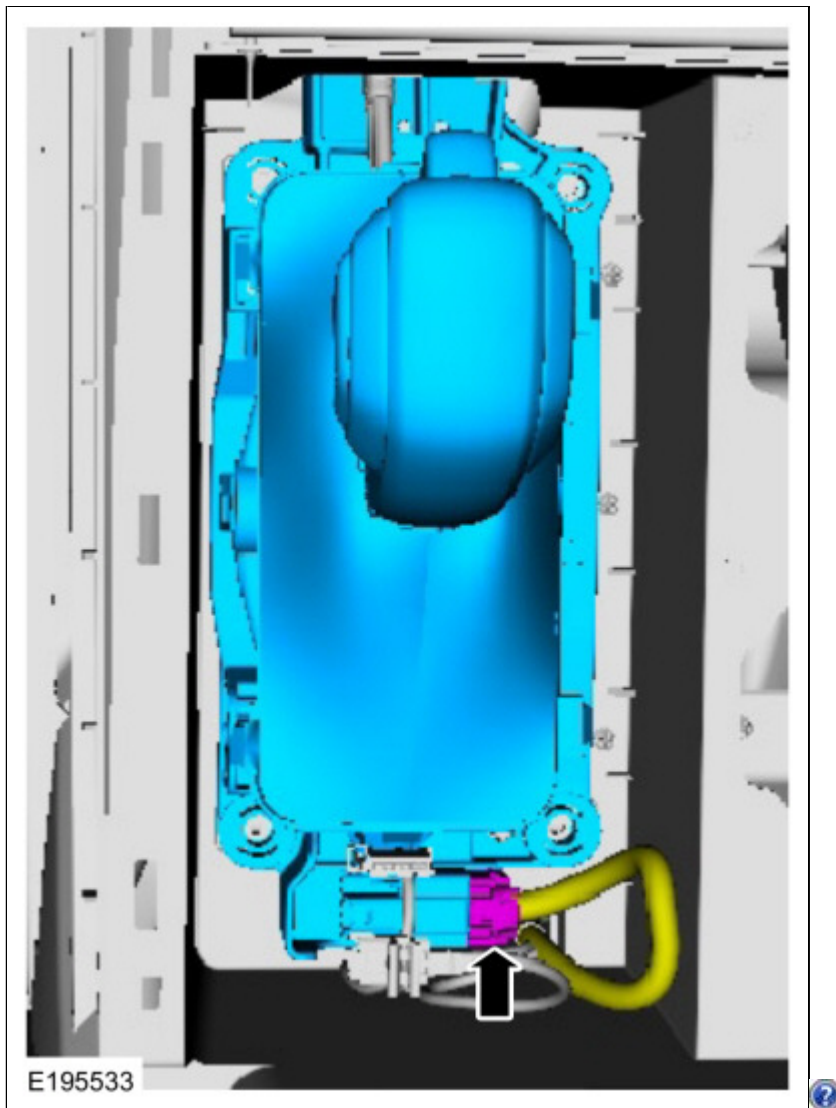

Installation

1. To install, reverse the removal procedure.
2. **NOTICE: Moving the selector lever may unseat the selector lever cable grommet. Make sure the grommet is correctly seated during installation.**

Verify the selector lever cable grommet is correctly seated.

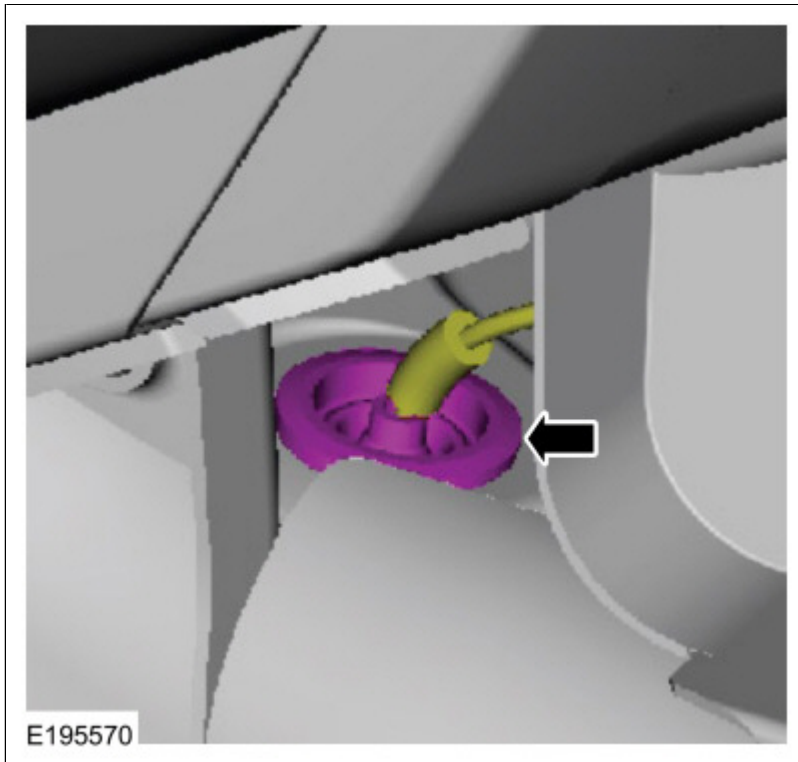

3. Adjust the selector lever cable.
Refer to: [Selector Lever Cable Adjustment - Vehicles With: Floor Shift](#) (307-05 Automatic Transmission External Controls, General Procedures).