


Visor Removal


NOTE: *LH side shown, RH side similar.*

1. Remove the retainer cover.
2. Remove the retainer.
3. Remove the sun visor.
4. If equipped.
Disconnect the electrical connector.

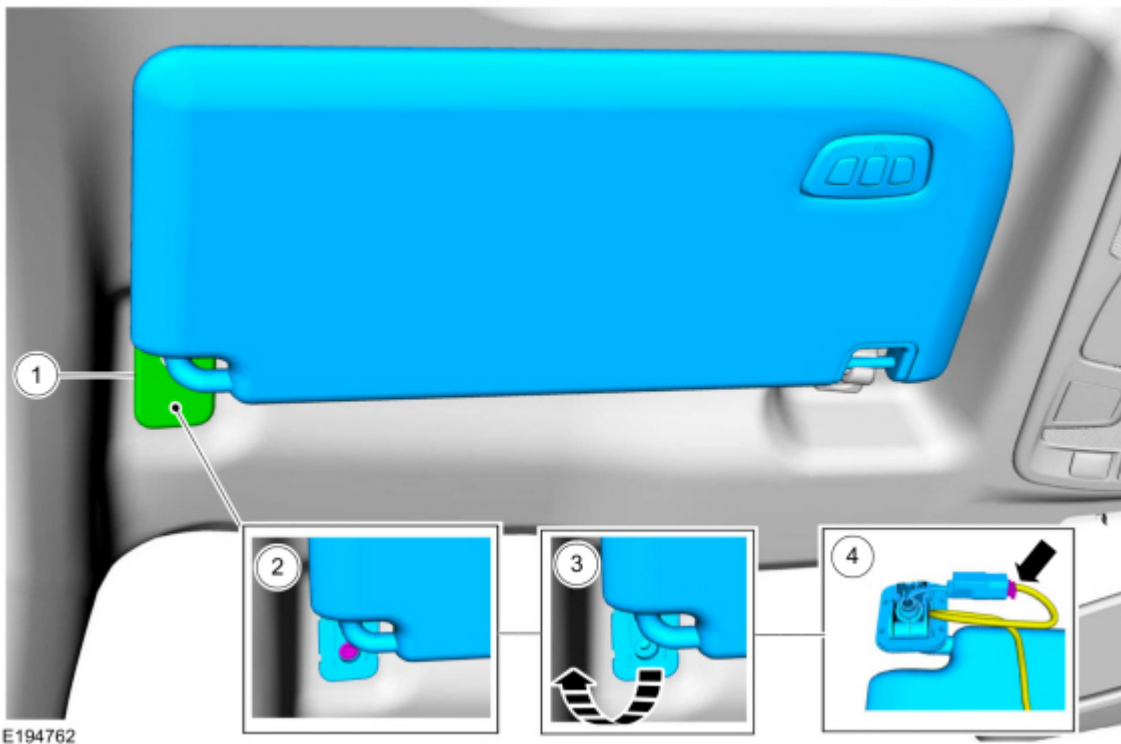

3. **NOTE:** *LH side shown, RH side similar.*

On both sides.
Remove the retainers and the sun visor clips.

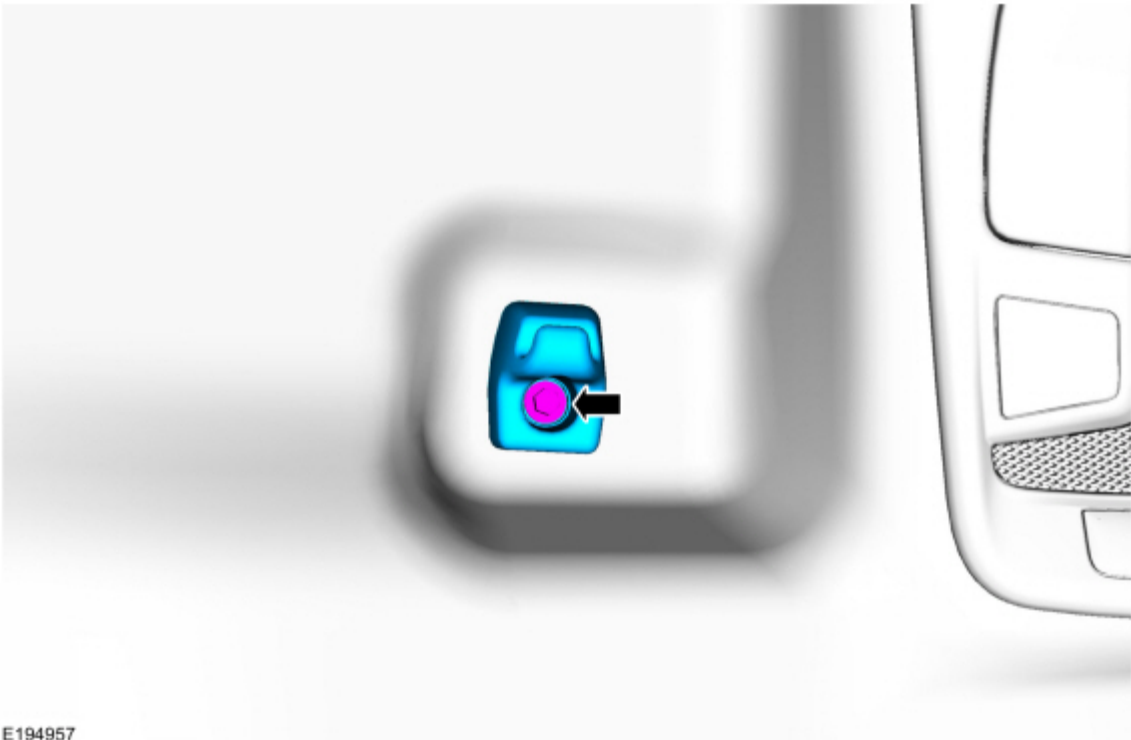

E194957