

A-Pillar Trim Panel

Removal


NOTE: LH side shown, RH side similar.

NOTE: Removal steps in this procedure may contain installation details.

1. Remove and discard the assist handle bolt covers.



2. Remove the A-pillar trim panel.
 1. Remove the bolts.
Torque: 55 lb.in (6.2 Nm)
 2. Release the retainer.
 3. If equipped, disconnect the speaker electrical connector.
 4. Release the clips and remove the A-pillar trim panel.

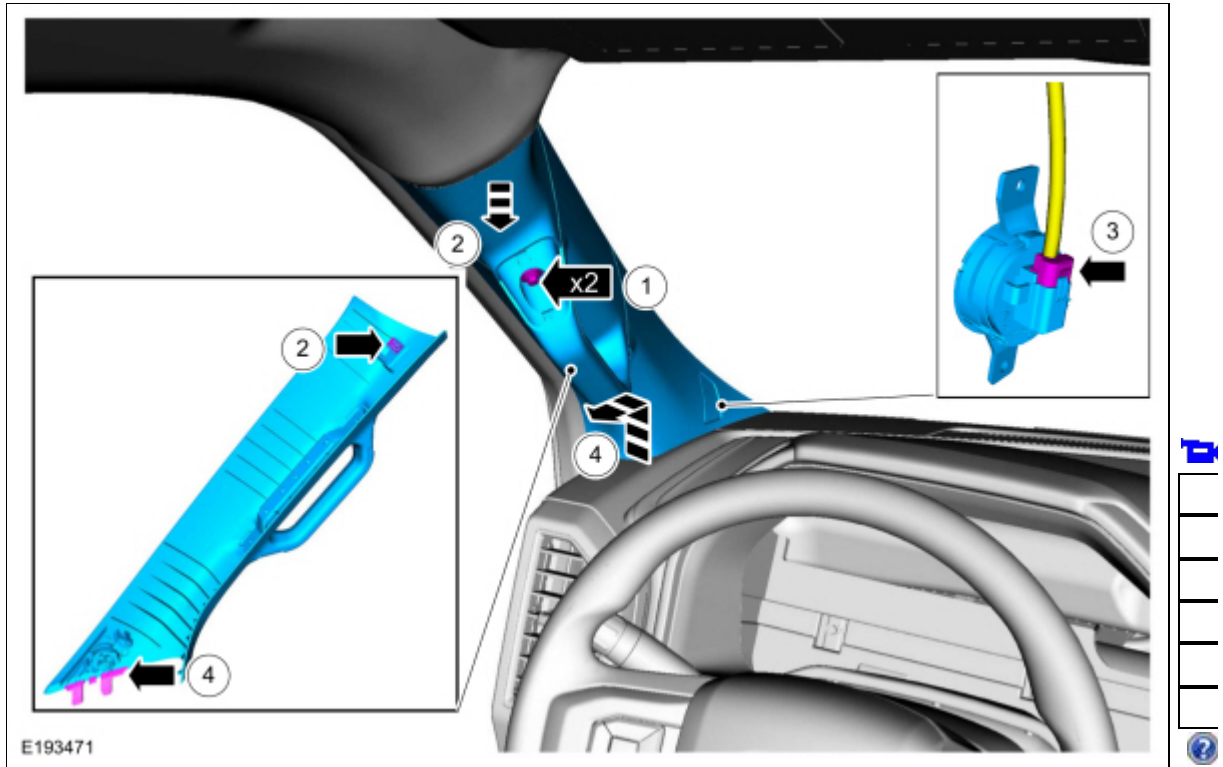

Installation

1. To install, reverse the removal procedure.

Copyright © 2016 Ford Motor Company

