

---

**Transmission Fluid Exchange****Special Tool(s) / General Equipment**

Fluid Exchanger

**Materials**

Name	Specification
Motorcraft® MERCON® ULV Automatic Transmission Fluid XT-12-ULV	WSS-M2C94-A

**Activation**

**NOTICE:** Use transmission fluid specific for this transmission. Do not use any supplemental transmission fluid additives or cleaning agents. The use of these products can cause internal transmission components to fail, which will affect the operation of the transmission.

- With the vehicle in NEUTRAL, position it on a hoist.  
Refer to: [Jacking and Lifting - Overview](#) (100-02 Jacking and Lifting, Description and Operation).
- Connect the Fluid Exchanger to the transmission fluid cooler tube after the transmission fluid cooler on the return tube. This helps remove any foreign material trapped in the transmission fluid coolers.  
Use the General Equipment: Fluid Exchanger
- Perform the transmission fluid exchange using the Fluid Exchanger.
  - Follow the manufacturer's instructions included with the machine.  
Use the General Equipment: Fluid Exchanger  
*Material:* Motorcraft® MERCON® ULV Automatic Transmission Fluid / XT-12-ULV (WSS-M2C94-A)
- Once the transmission fluid exchange is completed, disconnect the Fluid Exchanger. Reconnect any disconnected transmission fluid cooler tubes.  
Use the General Equipment: Fluid Exchanger
- Check the transmission fluid level.  
Refer to: [Transmission Fluid Level Check](#) (307-01B Automatic Transmission - 10-Speed Automatic Transmission - 10R80, General Procedures).

Copyright © 2016 Ford Motor Company