

Glove Compartment


Special Tool(s) / General Equipment

Interior Trim Remover


Removal

Glove compartment


1. Remove the glove compartment hinge pins.

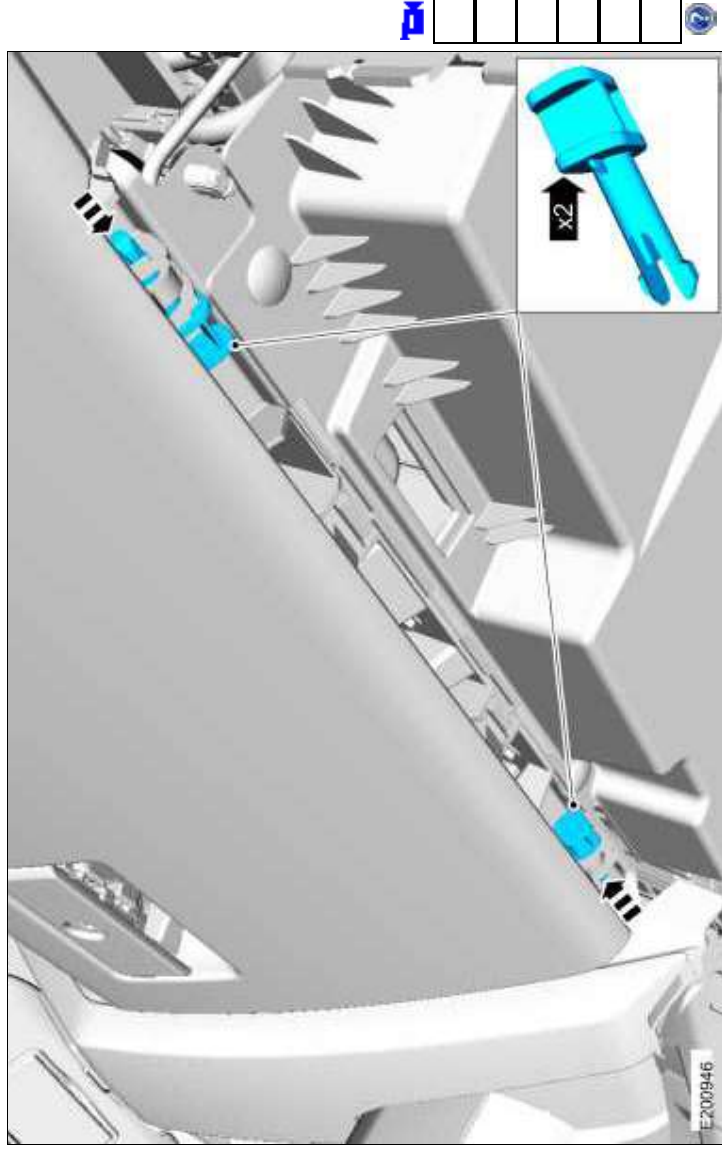


2. Release glove compartment downstops and fully lower the glove compartment.

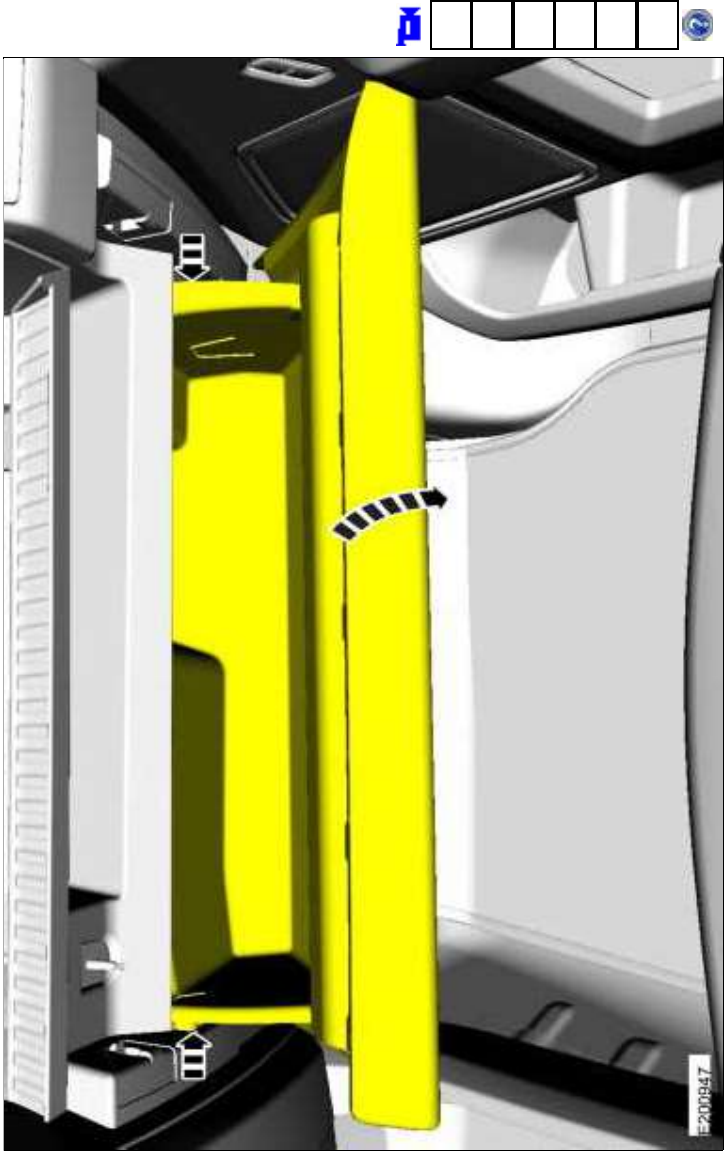

3. Remove the glove compartment dampener from the glove compartment by pushing down and forward at the damper end.

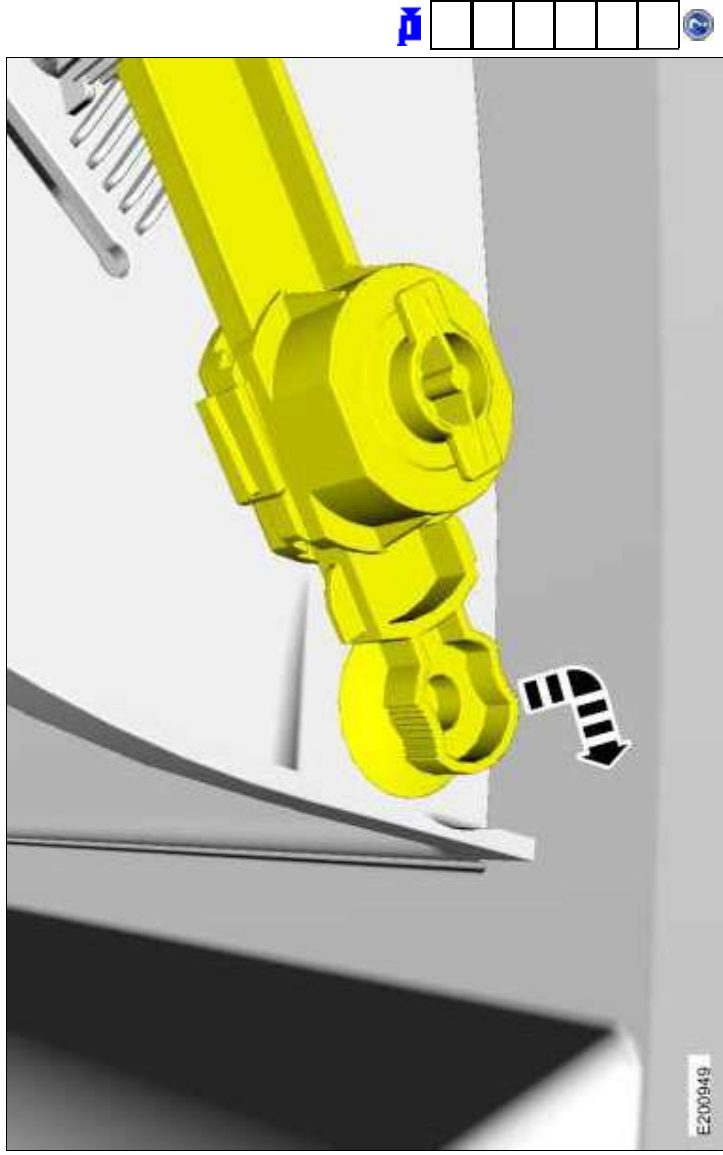

4. Remove the glove compartment from the hinge line.

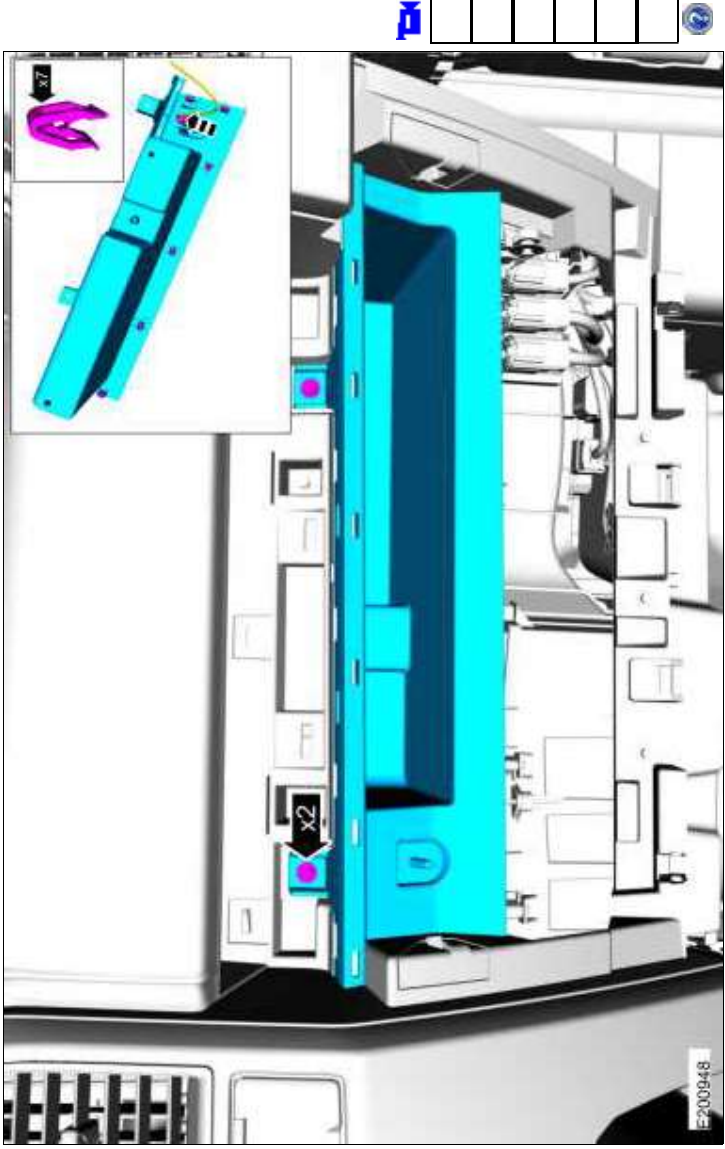

Installation

1. To install, reverse the removal procedure.