


BODY CONTROL MODULE (BCM)

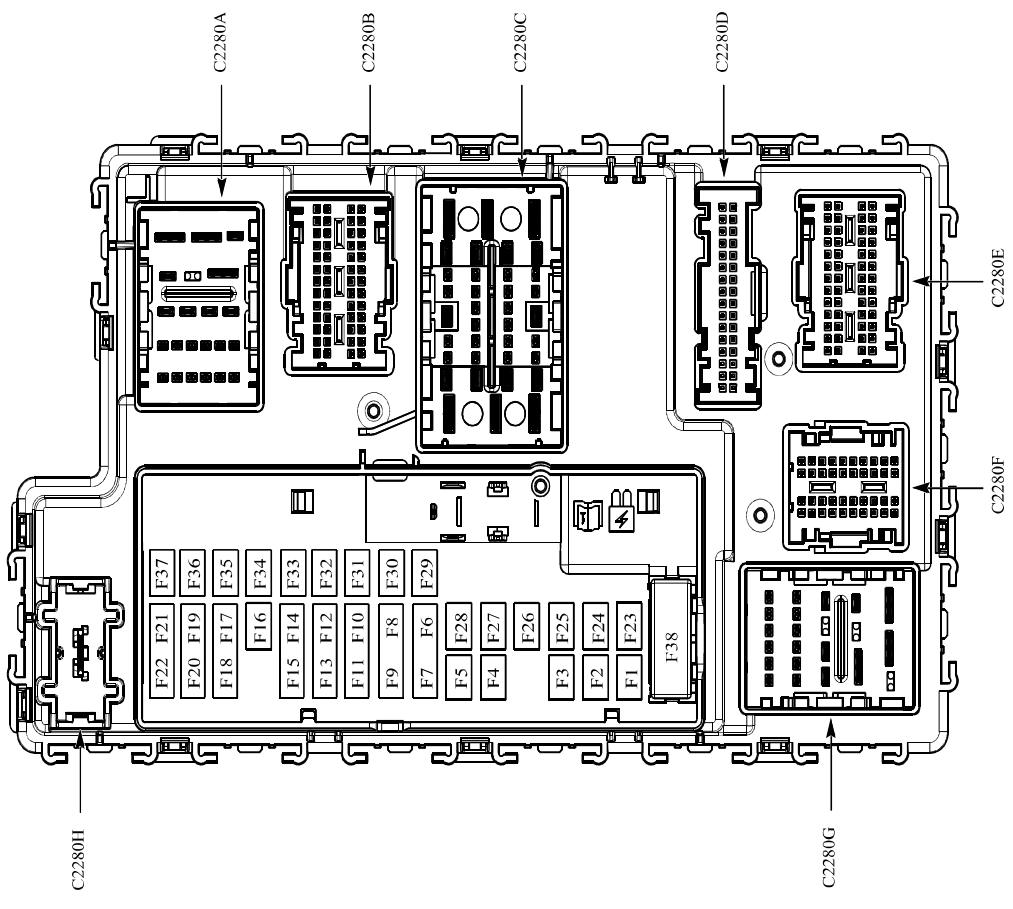

BODY CONTROL MODULE (BCM)

Fuse	Amps	Circuits protected
F1	10	Battery saver relay
F2	7.5	Driver Seat Module (DSM), Seat control switch, driver side front
F3	20	Driver/Fuel flap unlock relay, Double/Aux lock relay
F4	5	Trailer Brake Control (TBC) module, Powertrain Control Module (PCM), Brake Pedal Position (BPP) switch
F5	20	Not used
F6	10	Not used
F7	10	Not used
F8	10	Security horn relay
F9	10	Not used
F10	5	Not used
F11	5	Intrusion sensor
F12	7.5	Gateway module, Front Controls Interface Module (FCIM)
F13	7.5	Steering Column Control Module (SCCM), Instrument Panel Cluster (IPC)
F14	10	Brake Pedal Position (BPP) switch
F15	10	Gateway module
F16	15	Decklid/liftgate relay, Child lock relay
F17	5	Head Up Display (HUD) module
F18	5	Ignition switch-push button start, Ignition switch
F19	5	Floor shifter, Overdrive cancel switch
F20	5	Telematics module (Crew Chief)
F21	5	In-vehicle temperature/humidity sensor, Head Up Display (HUD) module
F22	5	Occupant Classification System Module (OCSM), Electronic park brake module
F23	10	Master window control switch, DC/AC inverter module, Roof opening panel module, Power sliding window switch, rear

BODY CONTROL MODULE (BCM) (continued)

Fuse	Amps	Circuits protected
F24	20	Central lock relay, Central unlock relay
F25	30	Driver Door Module (DDM)
F26	30	Passenger Door Module (PDM)
F27	30	Roof opening panel module, Sunshade module
F28	20	Not used
F29	30	Not used
F30	30	Not used
F31	15	Adjustable pedal switch
F32	10	Global Positioning System Module (GPSM), Sync module [APIM], Radio Transceiver Module (RTM), Front Control/Display Interface Module (FCDIM)
F33	20	Audio Control Module (ACM)
F34	30	Ignition Relay
F35	5	Restraints Control Module (RCM)
F36	15	Auto-dimming interior mirror, Heated seat module, rear, Image Processing Module B (IPMB), Heated Steering Wheel Module (HSWM)
F37	15	Battery Junction Box (BJB)
F38	30	Rear door window control switches