


Cylinder Head Temperature (CHT) Sensor

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. Remove the lower intake manifold.
Refer to: [Lower Intake Manifold](#) (303-01B Engine - 3.5L Duratec (209kW/284PS), Removal and Installation).
2. Disconnect the CHT electrical connector.

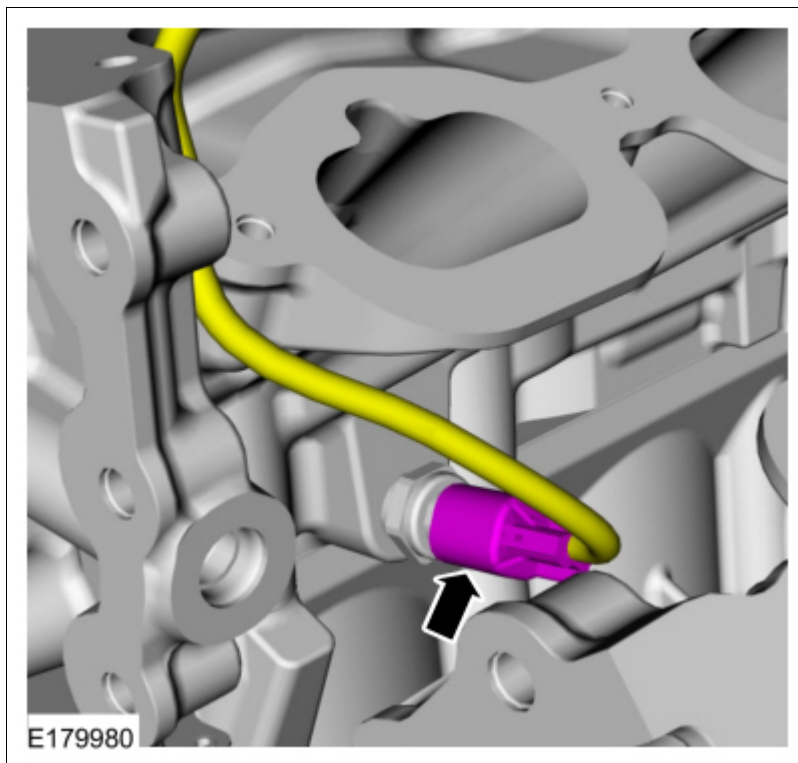

3. **NOTE:** Do not reuse the CHT sensor, install a new sensor.

Remove and discard the CHT sensor.
Torque: 89 lb.in (10 Nm)

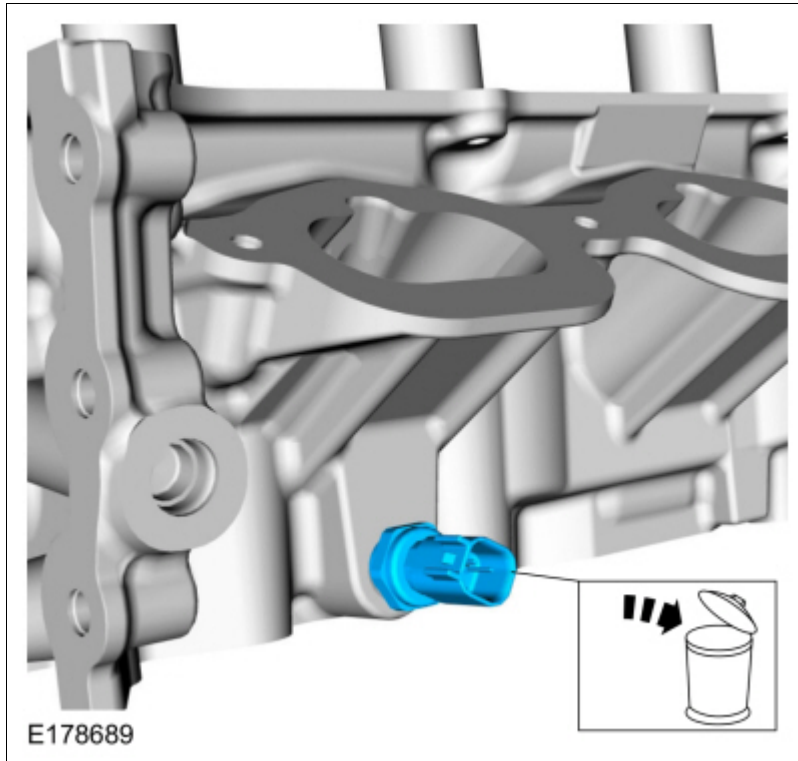

Installation

1. To install, reverse the removal procedure.

Copyright © 2019 Ford Motor Company
