


Air Cleaner Outlet Pipe


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Loosen the clamp and position the air cleaner outlet pipe aside.
Torque: 44 lb.in (5 Nm)

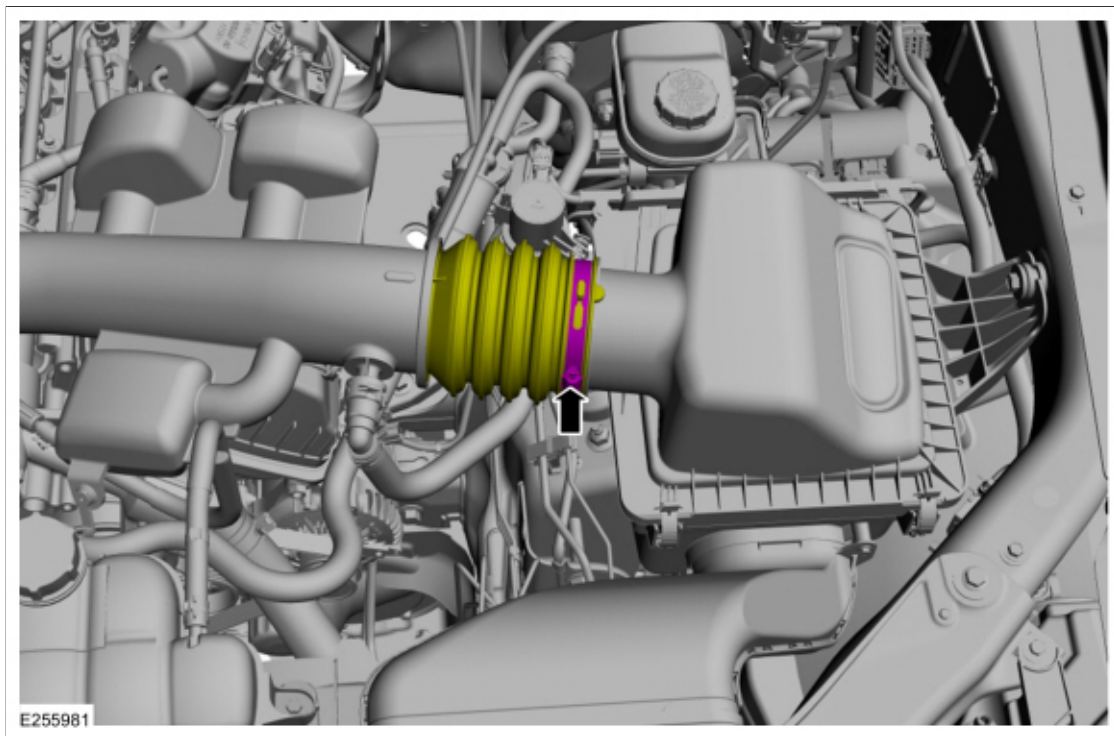

2.
 1. Detach the degas bottle hose and position aside.
 2. Disconnect the quick release coupling and position aside the crankcase ventilation tube.
Refer to: [Quick Release Coupling](#) (310-00B Fuel System - General Information - 3.3L Duratec-V6, General Procedures).
 3. Disconnect the quick release coupling and position aside the atmospheric tube.
Refer to: [Quick Release Coupling](#) (310-00B Fuel System - General Information - 3.3L Duratec-V6, General Procedures).
 4. Detach the clip and position aside the vacuum tube.

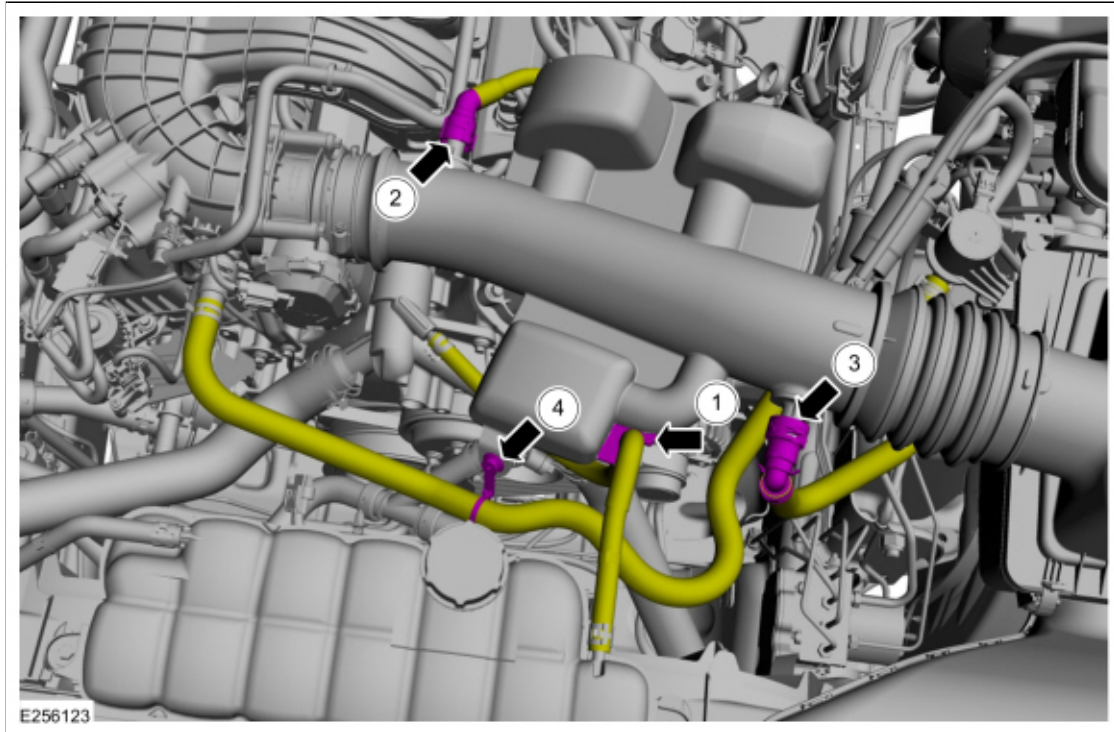

3. Loosen the clamp and remove the air cleaner outlet pipe.
Torque: 44 lb.in (5 Nm)

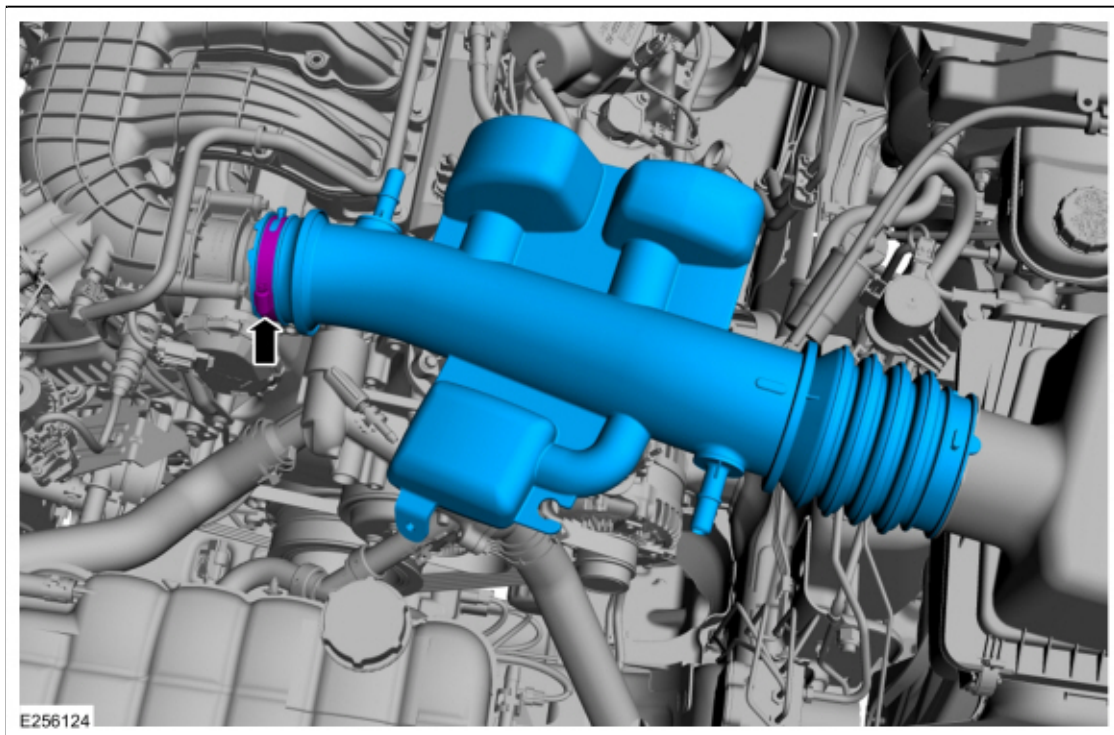

Installation

1. To install, reverse the removal procedure.

Copyright © 2019 Ford Motor Company
