


## Cylinder Head Temperature (CHT) Sensor

### Removal

**NOTE:** Removal steps in this procedure may contain installation details.

1. Remove the RH fender splash shield.  
Refer to: [Fender Splash Shield](#) (501-02 Front End Body Panels, Removal and Installation).
2. **NOTE:** Do not reuse the CHT sensor, install a new sensor.
  - Disconnect the CHT sensor electrical connector.
  - Remove and discard the CHT sensor.  
Torque: 97 lb.in (11 Nm)

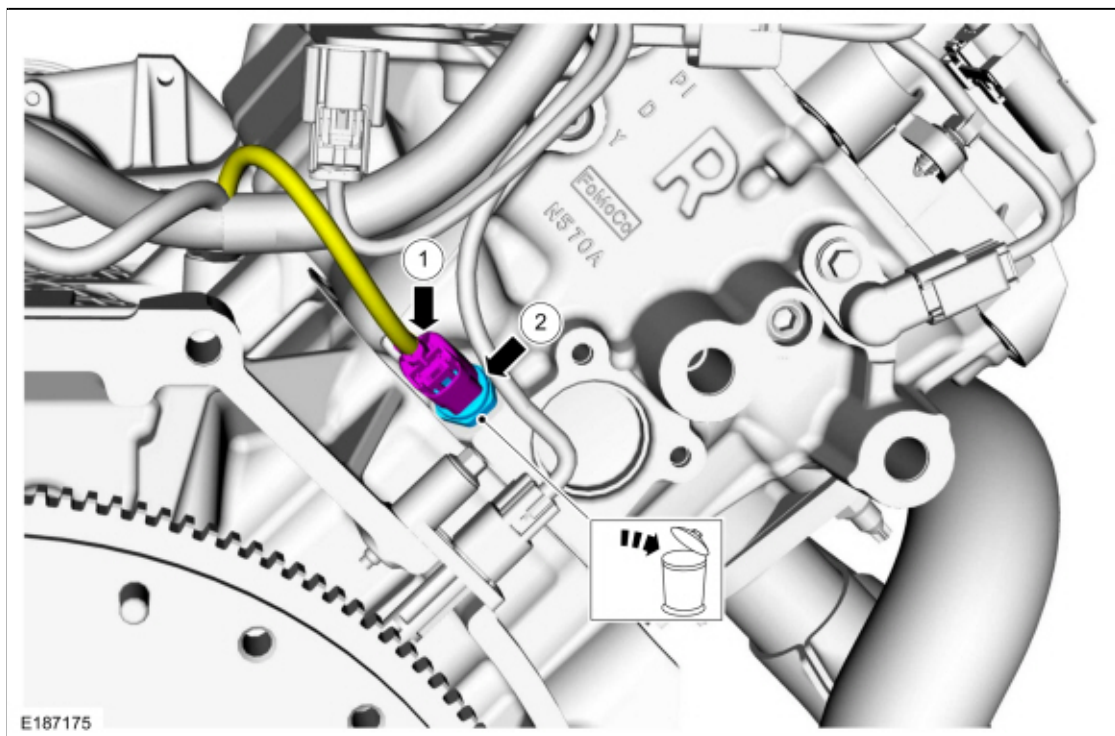

### Installation

1. To install, reverse the removal procedure.

