




### Generator — 5.0L

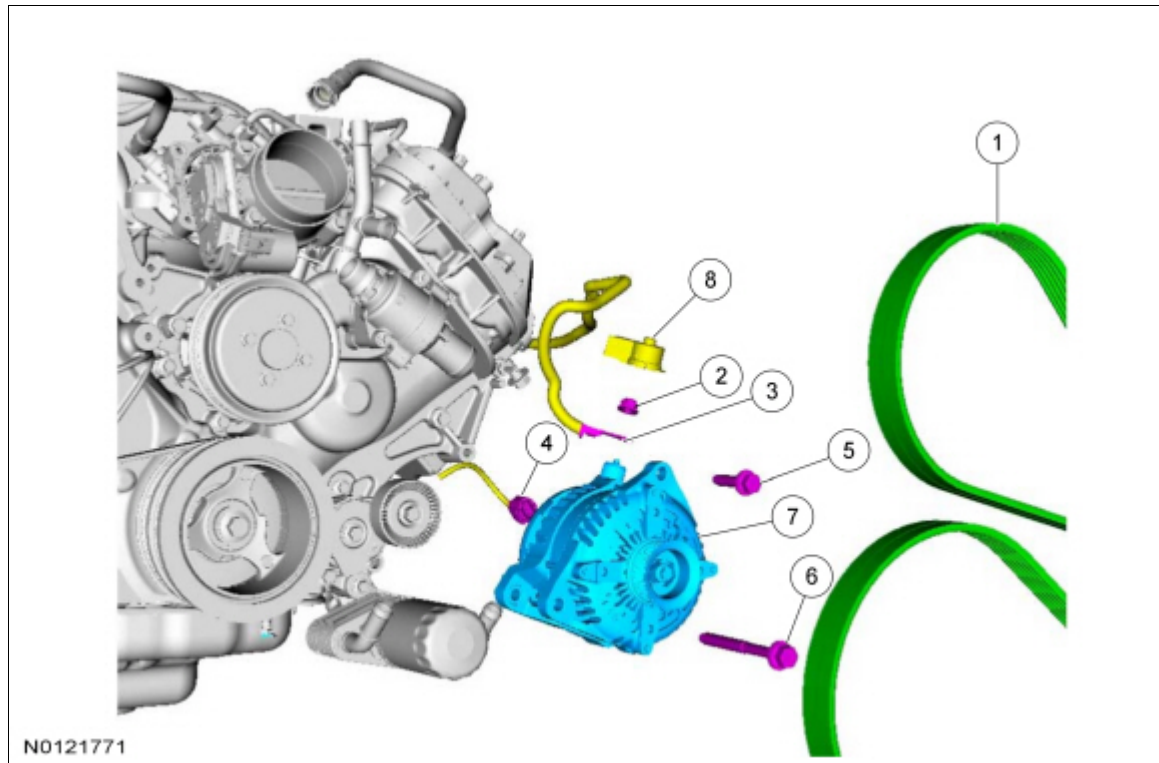

Item	Part Number	Description
1	<a href="#">8620</a>	Accessory drive belt
2	<a href="#">W711953</a>	Generator B+ terminal nut - 17 Nm (150 lb-in)
3	—	Generator B+ terminal (part of 14B060)
4	—	Generator electrical connector (part of 14B060)
5	<a href="#">W715094</a>	Upper generator bolt - 48 Nm (35 lb-ft)
6	<a href="#">W715092</a>	Lower generator bolt - 48 Nm (35 lb-ft)
7	<a href="#">10346</a>	Generator
8	—	Generator B+ protective boot (part of 14B060)

#### Removal and Installation

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to [Section 100-02](#).
2. Disconnect the battery. For additional information, refer to [Section 414-01](#).
3. Rotate the accessory drive belt tensioner counter counterclockwise and position the accessory drive

belt aside.

4. Remove the bolt and the accessory drive belt tensioner.
  - To install, tighten to 48 Nm (35 lb-ft).



5. Position the generator B+ protective boot aside, remove the B+ terminal nut and position the B+ terminal aside.
  - To install, tighten to 17 Nm (150 lb-in).
6. Disconnect the generator electrical connector.
7. Remove the upper generator bolt.
  - To install, tighten to 48 Nm (35 lb-ft).
8. Remove the lower generator bolt and the generator.
  - To install, tighten to 48 Nm (35 lb-ft).
9. To install, reverse the removal procedure.

Copyright © 2015 Ford Motor Company

