


## Locks and Security


### **Activating the two-button memory switch (if equipped)**

To activate this feature:

1. Position the seat, power mirrors, adjustable pedals and steering column (if equipped) to the desired positions.

2. Press and hold either the 1 or 2 control on the driver's seat for five seconds. (A tone will be heard after 1½ seconds when the memory store is done) continue to hold until a second tone is heard after five seconds.

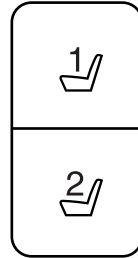


3. Within three seconds press the  control on the remote entry transmitter.

4. A tone will be heard when the activation is complete.

5. Repeat this procedure for another remote entry transmitter if desired.

### **Deactivating the two-button memory switch (if equipped)**

1. Press and hold either the 1 or 2 control on the driver's seat memory switch for five seconds. (A tone will be heard after 1½ seconds when the memory store is done) continue to hold until a second tone is heard after five seconds.

2. Within three seconds press the  control on the remote entry transmitter.

3. A tone will be heard when the deactivation is complete.

4. Repeat this procedure for another remote entry transmitter if desired.

### **Replacing the battery**

The remote entry transmitter uses one coin type three-volt lithium battery CR2032 or equivalent.