


### Passenger compartment fuse panel

The fuse panel is located below and to the left of the steering wheel by the brake pedal. Remove the panel cover to access the fuses.

To remove a fuse use the fuse puller tool provided on the fuse panel cover.

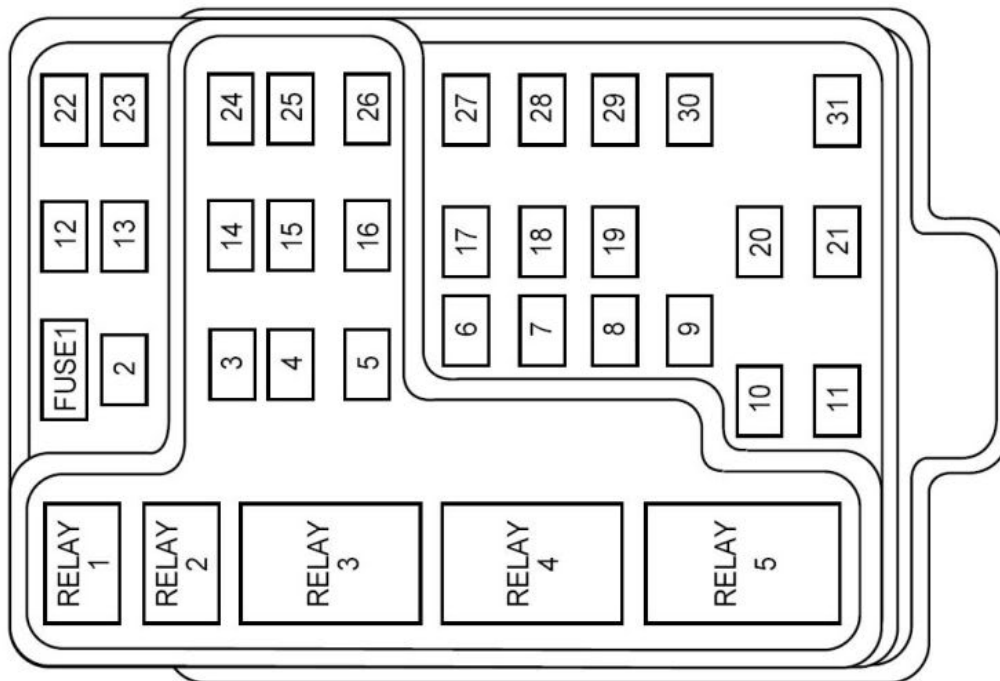


The fuses are coded as follows.

Fuse/Relay Location	Fuse Amp Rating	Passenger Compartment Fuse Panel Description
1	15A	Audio
2	5A	Powertrain Control Module (PCM), Cluster
3	20A	Cigar Lighter, Data Link Connector
4	5A	Exterior Rear View Mirror Switch, Mirror turn Signal Relays
5	15A	Speed Control Module, Reverse Lamp, Climate Mode Switch, Daytime Running Lamp Relay, Digital Transmission Range (DTR) Sensor

6	5A	Cluster, Brake Shift Interlock Solenoid, GEM Module
7	—	Not Used
8	5A	Radio, Remote Entry Module, GEM Module, In-vehicle entertainment system (SuperCrew only)
9	—	Not Used
10	—	Not Used
11	30A	Front Washer Pump Relay, Wiper Run/Park Relay, Wiper Hi/LO Relay, Windshield Wiper Motor
12	—	Not Used
13	20A	Stop Lamp Switch (Lamps), Turn/Hazard Flasher
14	15A	Battery Saver Relay, Interior Lamp Relay
15	5A	Stop Lamp Switch, (Speed Control, Brake Shift Interlock), GEM Module, RABS Module
16	20A	Headlamps (Hi Beams), Cluster (Hi Beam Indicator)
17	—	Not Used
18	5A	Instrument Illumination (Dimmer Switch Power)
19	—	Not Used
20	5A	Audio, GEM Module, Powertrain Control Module (PCM), Transmission Range Sensor
21	15A	Digital Transmission Range (DTR) Sensor, Clutch Switch, Starter Relay, I/P fuse 20
22	10A	Air Bag Module, Passenger Airbag Deactivation Module

Fuse/Relay Location	Fuse Amp Rating	Passenger Compartment Fuse Panel Description
23	10A	Trailer Tow Battery Charge Relay, Turn/Hazard Flasher, 4x4 Solenoids, 4x4 Relays, Overhead Console, 4 Wheel Anti-Lock Brake System (4WABS) Module, EC Mirror, Heated Seats
24	10A	Function Selector Switch Assembly
25	—	Not Used
26	10A	Right Side Low Beam Headlamp
27	5A	Foglamp Relay and Foglamp Indicator, Main Light Switch (upstream)
28	10A	Left Side Low Beam Headlamp
29	5A	Autolamp Module, Transmission Overdrive Control Switch, Central Security Module, Belt Minder
30	30A	Passive Anti Theft Transceiver, Cluster, Ignition Coils, Powertrain Control Module Relay, Coil on Plugs, Radio Noise Capacitor, ECC Diode
31	—	Not Used
Relay 1	—	Interior Lamp Relay
Relay 2	—	Battery Saver Relay
Relay 3	—	Not Used
Relay 4	—	One Touch Down Window Relay
Relay 5	—	ACC Delay Relay

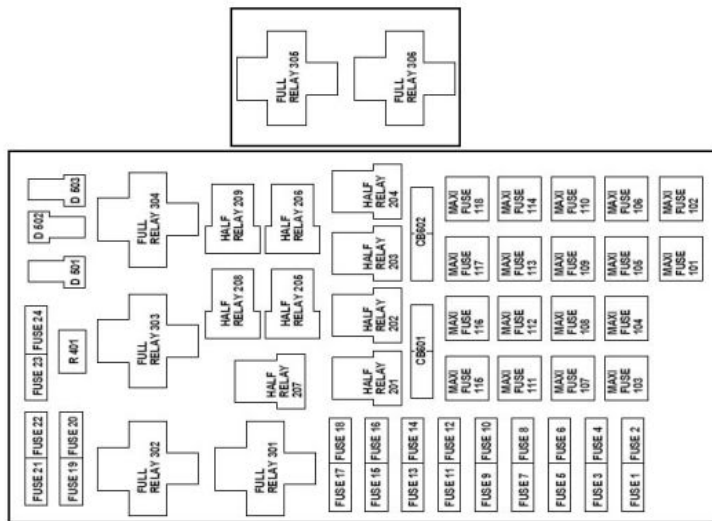

The high-current fuses are coded as follows.

Fuse/Relay Location	Fuse Amp Rating	Power Distribution Box Description
1	20A *	Power Point
2	30A*	Powertrain Control Module
3	30A*	Main Light Switch, Headlamp Relay, Multifunction Switch
4	—	Not Used
5	20A*	Trailer Tow Backup/Park Lamps
6	15A*	Main Light Switch, Park Lamp Relay

Fuse/Relay Location	Fuse Amp Rating	Power Distribution Box Description
7	20A*	Horn
8	15A*	Power Door Locks, CSM, Lock Relays
9	15A*	Daytime Running Lamps (DRL), Fog Lamps
10	20A*	Fuel Pump
11	20A*	Alternator Field
12	20A*	Rear Auxiliary Power Point
13	15A*	A/C Clutch
14	—	Not Used
15	10A	Running Board Lamps (Supercrew only)
16	—	Not Used
17	—	Not Used
18	15A*	Powertrain Control Module, Fuel Injectors, Fuel Pump Relay, Mass Air Flow Sensor
19	10A*	Trailer/Camper Adapter (Right Stop and Right Turn Lamp)
20	10A*	Trailer/Camper Adapter (Left Stop and Left Turn Lamp)
21	—	Not Used
22	—	Not Used
23	15A*	HEGO Sensor, Automatic Transmission
24	—	Not Used
101	30A**	Trailer Tow Battery Charge
102	50/20A**	Four Wheel Antilock Brake Module/Rear Wheel Antilock Brake Module, Ignition Switch

103	50A**	Central Junction Box
104	30A**	4x4 Shift Motor & Clutch
105	40A**	Climate Control Front Blower
106	20A**	Inter Cooler Pump (Lightning only)
107	—	Not Used
108	30A**	Trailer Tow Electric Brake

194

### Roadside emergencies

Fuse/Relay Location	Fuse Amp Rating	Power Distribution Box Description
109	—	Not Used
110	30A**	ACC Delay Relay
111	40A**	Ignition Switch Battery Feed (Start and Run Circuits)
112	30A**	Drivers Power Seat, Adjustable Pedal switch
113	40A**	Ignition Switch Battery Feed (Run and Accessory Circuits)
114	—	Not Used
115	20A**	Power Door Locks (SuperCrew only)
116	—	Not Used
117	—	Not Used

117	—	Not Used
118	30A**	Heated Seats
201	—	Trailer Tow Park Lamp Relay
202	—	Front Wiper Run/Park Relay
203	—	Trailer Tow Backup Lamp Relay
204	—	A/C Clutch Relay
205	—	Horn Relay
206	—	Fog Lamp Relay
207	—	Front Washer Pump Relay
208	—	Inter Cooler Pump Relay (Lightning only)
209	—	Front Wiper Hi/Lo Relay
301	—	Fuel Pump Relay
302	—	Trailer Tow Battery Charge Relay
303	—	Not Used
304	—	Powertrain Control Module Relay
305	—	Fuel Pump Hi/Lo Relay (Lightning only)
306	—	Inertia Switch Relay (Lightning only)
401	—	Not Used
501	—	Powertrain Control Module Diode
502	—	A/C Compressor Diode

Fuse/Relay Location	Fuse Amp Rating	Power Distribution Box Description
503	—	Not Used
601	CB	Power Windows, Moonroof (SuperCrew only)
602	—	Not Used
*Mini fuses **Maxi fuses		



10-08-2013, 07:40 PM

#4

[Old School Mechanic](#)

New User

Join Date: Oct 2013  
Posts: 1