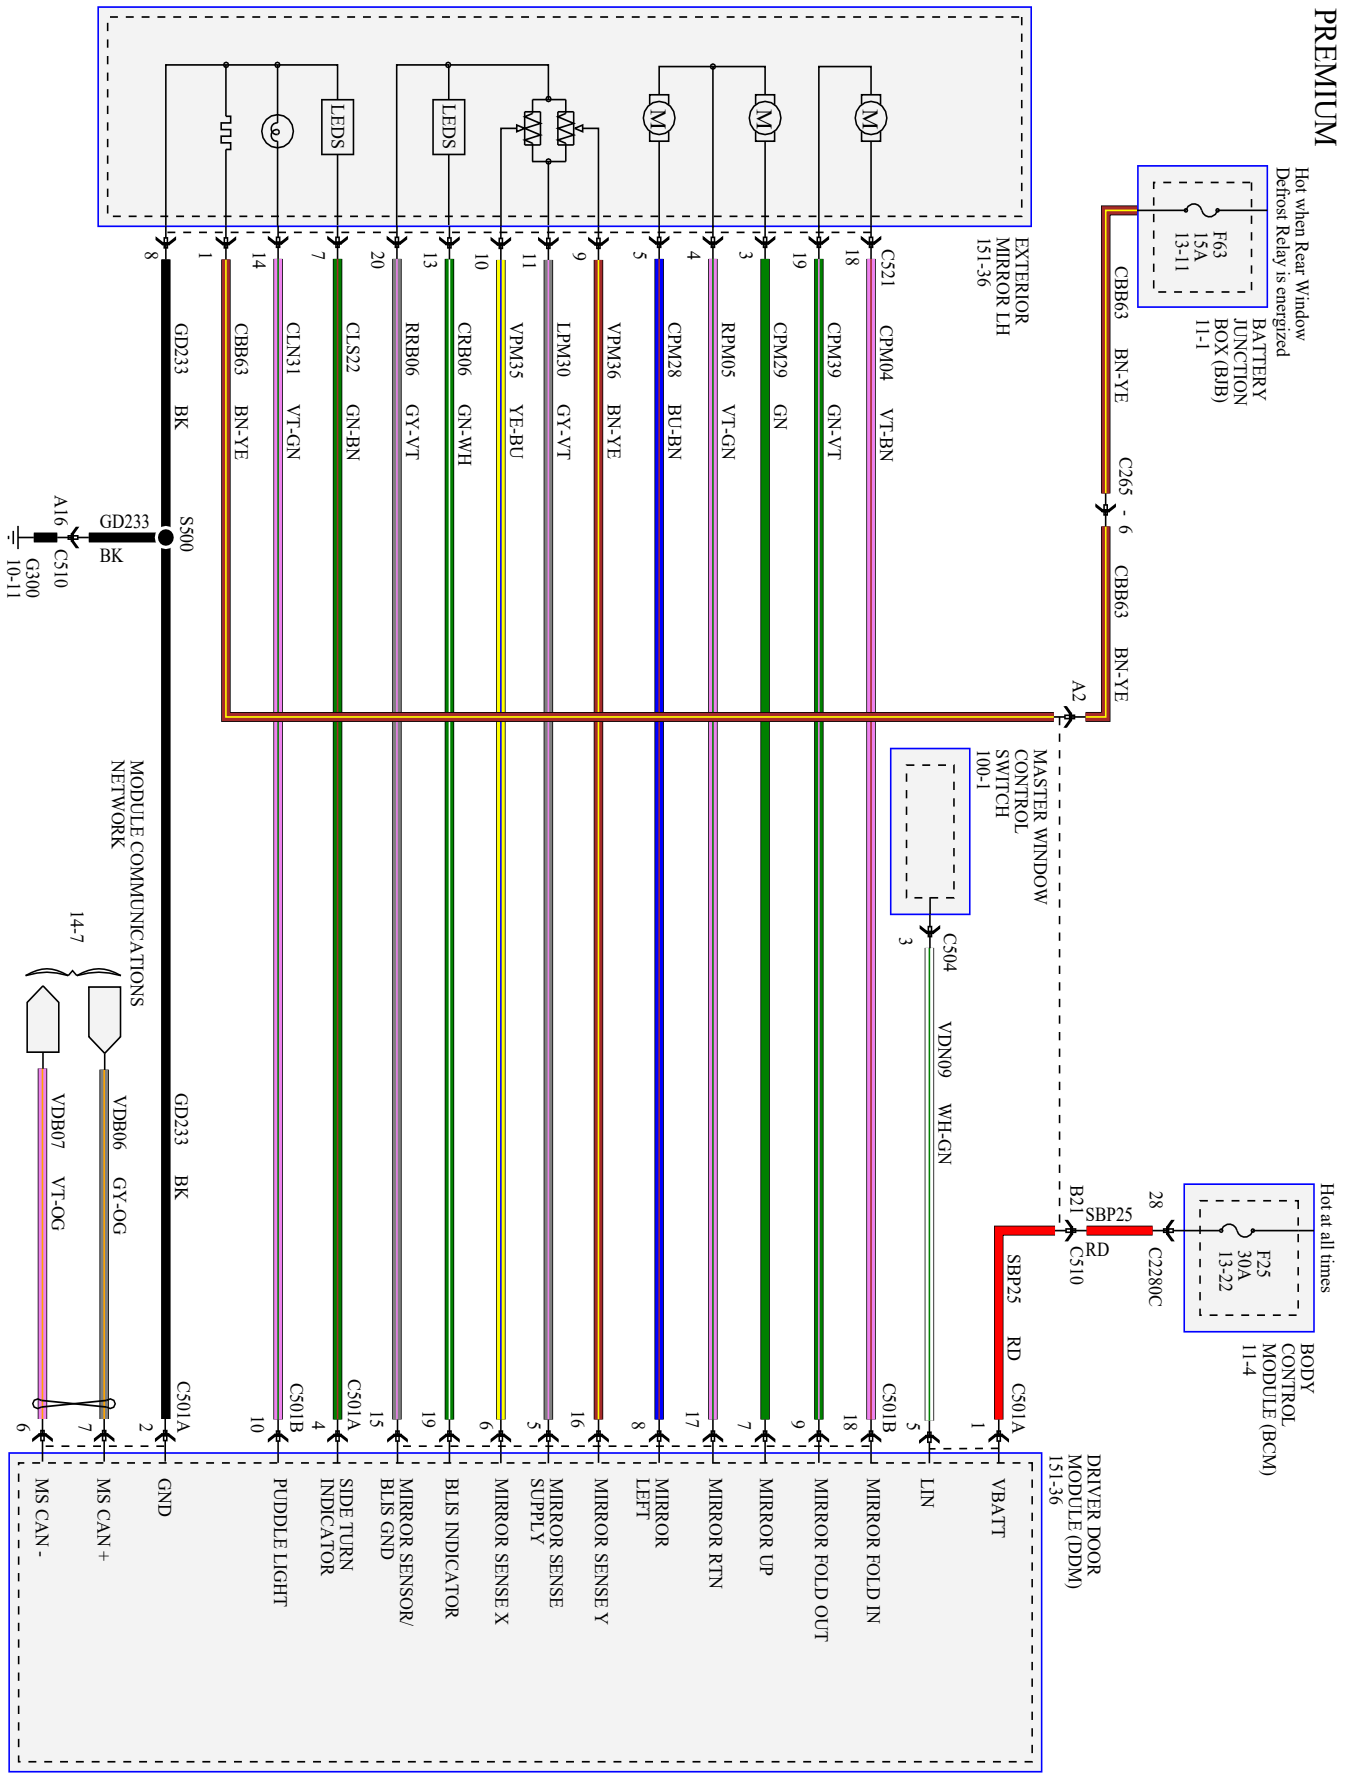
PREMIUM
Hot when Rear Window Defrost Relay is energized
BATTERY JUNCTION BOX (BJB) 11-1
F63 15A 13-11
CBB63 BN-YE
C265 - 6
CBB63 BN-YE
A2
EXTERIOR MIRROR LH 151-36
C521 CPM04 VT-BN
CPM39 GN-VT
CPM29 GN
RPM05 VT-GN
CPM28 BU-BN
VPM36 BN-YE
LPM30 GY-VT
VPM35 YE-BU
CRB06 GN-WH
RRB06 GY-VT
CLS22 GN-BN
CLN31 VT-GN
CBB63 BN-YE
GD233 BK
S500
GD233 BK
A16
C510
G300 10-11
MODULE COMMUNICATIONS NETWORK
14-7
VDB07 VT-OG
VDB06 GY-OG
GD233 BK
C501A
GND
PUDDLE LIGHT
SIDE TURN INDICATOR
MIRROR SENSOR/ BLIS GND
BLIS INDICATOR
MIRROR SENSE X
MIRROR SENSE SUPPLY
MIRROR SENSE Y
MIRROR LEFT
MIRROR RTN
MIRROR UP
MIRROR FOLD OUT
MIRROR FOLD IN
LIN
VBATT
DRIVER DOOR MODULE (DDM) 151-36
MS CAN -
MS CAN +
MASTER WINDOW CONTROL SWITCH 100-1
C504
VDN09 WH-GN
Hot at all times
BODY CONTROL MODULE (BCM) 11-4
F25 30A 13-22
C2280C
SBP25
B21
C510
SBP25 RD
C501A