

**IN-VEHICLE REPAIR: TIMING DRI...**

**IN-VEHICLE REPAIR: TIMING DRIVE COMPONENTS (ENGINE - 3.5L GTDI)**

303-01A Engine - 3.5L GTDI


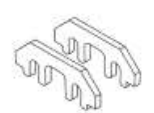
2011 F-150


IN-VEHICLE REPAIR

Procedure revision date: 07/30/2012

**Timing Drive Components**

Special Tool(s)

 <p>ST3234-A</p>	<p>Hold Down, Secondary Chain 303-1530</p>
 <p>ST2979-A</p>	<p>Tool, Camshaft Holding 303-1248</p>

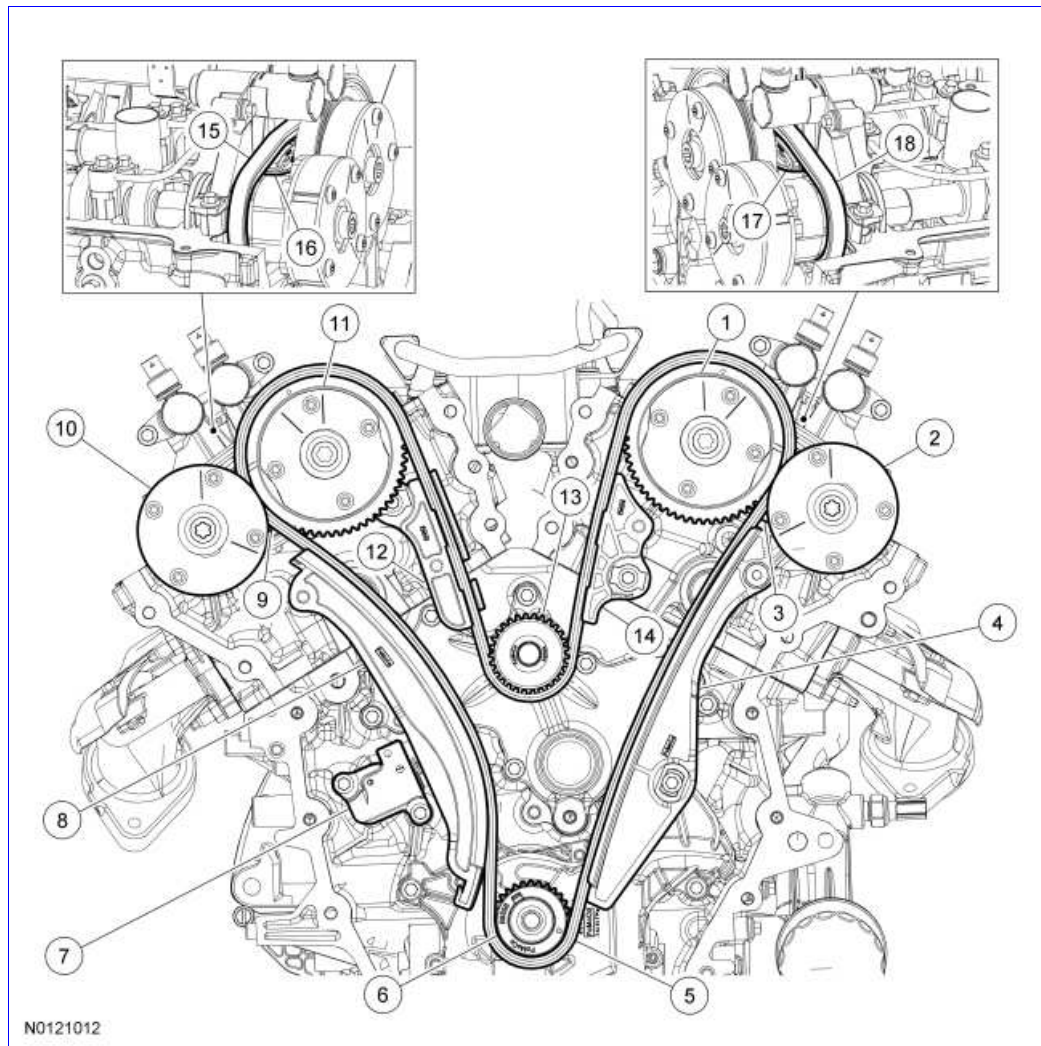

Item	Part Number	Description
1	6256	LH intake Variable <b>Camshaft Timing</b> (VCT) assembly
2	6C525	LH exhaust VCTassembly
3	6K297	LH secondary <b>timing chain</b> tensioner shoe


4	6B274	LH primary <a href="#">timing chain</a> guide
5	6268	Primary <a href="#">timing chain</a>
6	6306	Crankshaft <a href="#">timing chain</a> sprocket
7	6L266	Primary <a href="#">timing chain</a> tensioner
8	6K255	RH primary <a href="#">timing chain</a> tensioner arm
9	6K297	RH secondary <a href="#">timing chain</a> tensioner shoe
10	6C525	RH exhaust VCTassembly
11	6256	RH intake VCTassembly
12	6K297	RH primary <a href="#">timing chain</a> guide
13	8501	<a href="#">Timing chain</a> gear
14	6K297	LH primary <a href="#">timing chain</a> guide
15	6268	RH secondary <a href="#">timing chain</a>
16	6K254	RH secondary <a href="#">timing chain</a> tensioner
17	6K254	LH secondary <a href="#">timing chain</a> tensioner
18	6268	LH secondary <a href="#">timing chain</a>

## Removal


**NOTICE:** During engine repair procedures, cleanliness is extremely important. Any foreign material, including any material created while cleaning gasket surfaces, that enters the oil passages, coolant passages or the oil pan may cause engine failure.

## All engines

1. Remove the engine front cover. For additional information, refer to [Engine Front Cover](#) in this section.
2. Rotate the crankshaft clockwise and align the timing marks on the intake Variable [Camshaft Timing](#) (VCT) assemblies as shown.

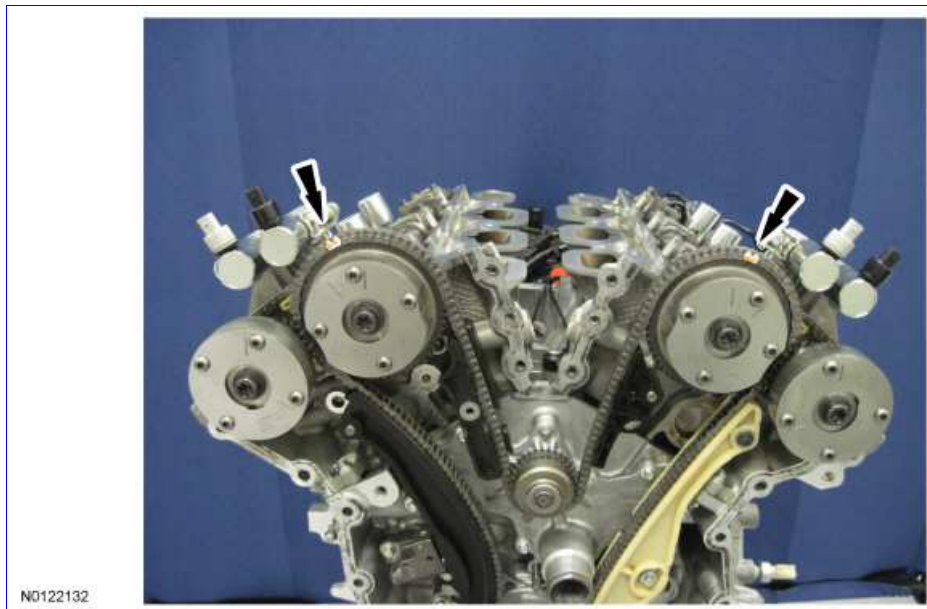


3. Remove the 3 bolts and the LH valve train oil tube.

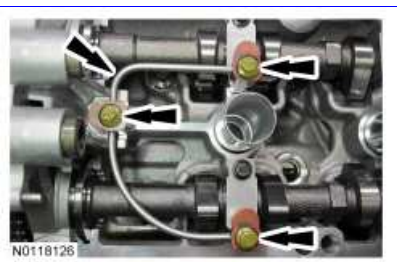

4. **NOTE:**The Camshaft Holding Tool will hold the camshafts in the Top Dead Center (TDC) position.  
Install the Camshaft Holding Tool onto the flats of the LH camshafts.



5. Remove the 3 bolts and the RH valve train oil tube.

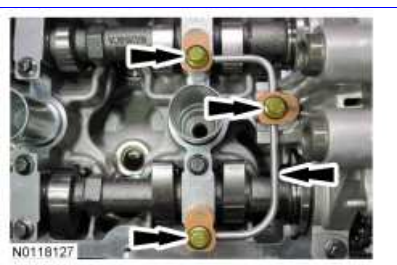


6. **NOTE:**The Camshaft Holding Tool will hold the camshafts in the TDC position.  
Install the Camshaft Holding Tool onto the flats of the RH camshafts.



**NOTE:**The following 3 steps are for primary [timing chains](#) that the colored links are not visible.

7. Mark the [timing chain](#) link that aligns with the timing mark on the LH intake VCT assembly as shown.

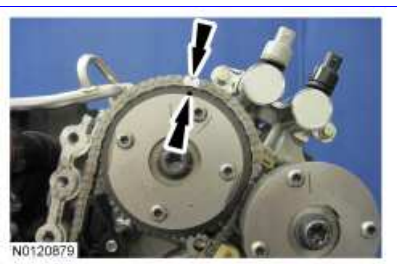

8. Mark the [timing chain](#) link that aligns with the timing mark on the RH intake VCT assembly as shown.



9. **NOTE:**The crankshaft sprocket timing mark should be between the 2 colored links.

Mark the 2 **timing chain** links that align with the timing mark on the crankshaft sprocket as shown.



10. Remove the 2 bolts and the primary **timing chain** tensioner.



11. Remove the primary **timing chain** tensioner arm.



12. Remove the 2 bolts and the lower LH primary **timing chain** guide.



13. **NOTE:**Removal of the VCToil control solenoid will aid in the removal of the primary [timing chain](#).

**NOTE:**A slight twisting motion will aid in the removal of the VCToil control solenoid.

**NOTE:**Keep the VCToil control solenoid clean of dirt and debris.

Remove the bolt and the LH intake VCToil control solenoid.



14. **NOTE:**Removal of the VCToil control solenoid will aid in the removal of the primary [timing chain](#).

**NOTE:**A slight twisting motion will aid in the removal of the VCToil control solenoid.

**NOTE:**Keep the VCToil control solenoid clean of dirt and debris.

Remove the bolt and the RH intake VCToil control solenoid.



15. Remove the primary [timing chain](#).



N0122133

16. Remove the crankshaft **timing chain** sprocket.



N0118123

17. **NOTICE:** Do not use power tools to remove the bolt or damage to the LH primary **timing chain** guide may occur.

Remove the bolt and the upper LH primary **timing chain** guide.



N0118125

18. **NOTE:**The 2 VCToil control solenoids are removed for clarity.

**NOTE:**The Secondary Chain Hold Down is inserted through a hole in the top of the mega cap.

Compress the LH secondary **timing chain** tensioner and install the Secondary Chain Hold Down in the hole on the rear of the secondary **timing chain** tensioner guide and let it hold against the mega cap to retain the tensioner in the collapsed position.



N0118130

19. Remove and discard the 2 LH VCTassembly bolts.



20. Remove the 2 LH VCT assemblies and secondary [timing chain](#).




21. **NOTE:** The 2 VCToil control solenoids are removed for clarity.

**NOTE:** The Secondary Chain Hold Down is inserted through a hole in the top of the mega cap.

Compress the RH secondary [timing chain](#) tensioner and install the Secondary Chain Hold Down in the hole on the rear of the secondary [timing chain](#) tensioner guide and let it hold against the mega cap to retain the tensioner in the collapsed position.



22. Remove and discard the 2 RH VCT assembly bolts.

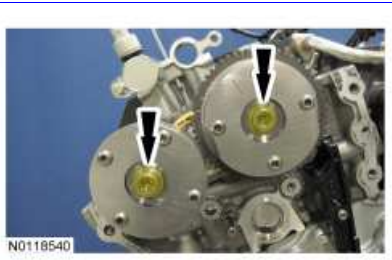

23. Remove the 2 RH VCT assemblies and secondary [timing chain](#).



24. **NOTICE:** Do not use power tools to remove the bolt or damage to the RH primary [timing chain](#) guide may occur.

Remove the 2 bolts and the RH primary [timing chain](#) guide.



25. Remove the 9 bolts and the **timing chain** gear.
- Discard the gasket.



#### Engines with secondary **timing chain** tensioner removed

**NOTICE:** The following steps are only for the replacement of the secondary **timing chain** tensioners. Do not reuse the secondary **timing chain** tensioners if removed, or damage to the engine may occur.

26. **NOTE:**A slight twisting motion will aid in the removal of the VCToil control solenoid.

**NOTE:**Keep the VCToil control solenoid clean of dirt and debris.

Remove the LH exhaust VCToil control solenoid.



27. Remove the LH secondary **timing chain** tensioner shoe.



28. Remove the LH secondary **timing chain** tensioner by pushing up from the bottom and remove.





29. **NOTE:**A slight twisting motion will aid in the removal of the VCToil control solenoid.

**NOTE:**Keep the VCToil control solenoid clean of dirt and debris.

Remove the RH exhaust VCToil control solenoid.



30. Remove the RH secondary **timing chain** tensioner shoe.




31. Remove the RH secondary **timing chain** tensioner by pushing up from the bottom and remove.



## Installation


### All engines

- Using a new gasket, install the **timing chain** gear and the 9 bolts. Tighten in the sequence shown in 2 stages:
  - Stage 1: Tighten to 10 Nm (89 lb-in).
  - Stage 2: Tighten an additional 45 degrees.

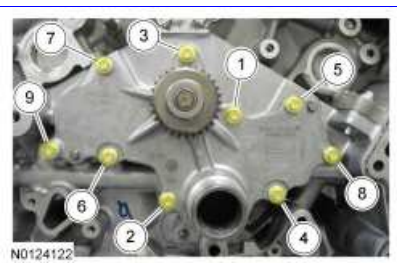

- Install the RH primary **timing chain** guide and the 2 bolts.

- Tighten to 10 Nm (89 lb-in).

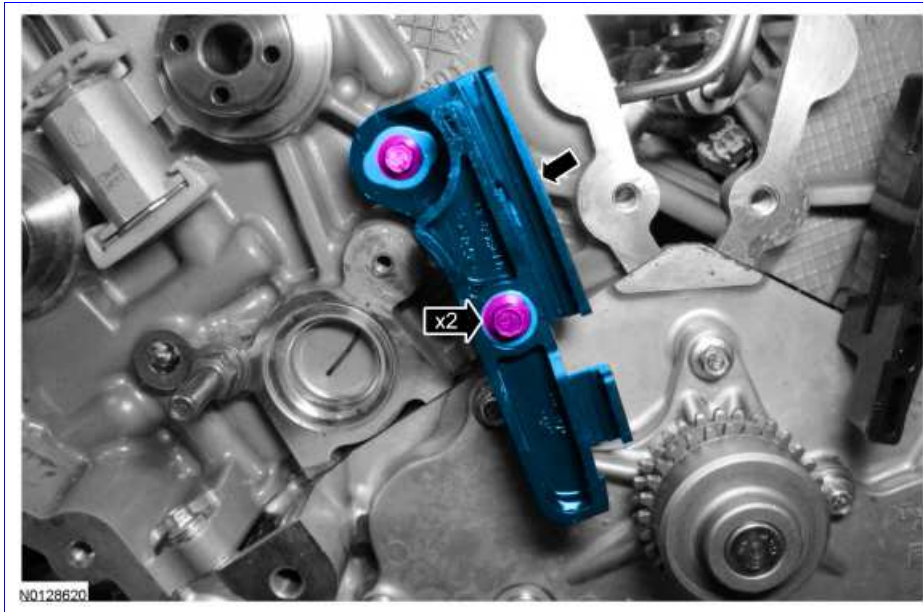

#### Engines with secondary **timing chain** tensioner removed

**NOTICE:** The following steps are only for the replacement of the secondary **timing chain** tensioners. Do not reuse the secondary **timing chain** tensioners if removed or damage to the engine may occur.

3. **NOTE:**Apply clean engine oil to the secondary **timing chain** tensioner O-ring seals and mega cap bore.

**NOTE:**Do not remove the secondary **timing chain** tensioner shipping clip, until instructed to do so.

Install the RH secondary **timing chain** tensioner by pushing it down all the way until a snap is heard and the tensioner is seated all the way down the mega cap bore.




4. Install the RH secondary **timing chain** tensioner shoe.



5. Remove and discard the RH secondary **timing chain** tensioner shipping clip.



6. Assemble the RH Variable **Camshaft Timing** (VCT) assembly, the RH exhaust camshaft sprocket and the RH secondary **timing chain**.
- Align the colored links with the timing marks.

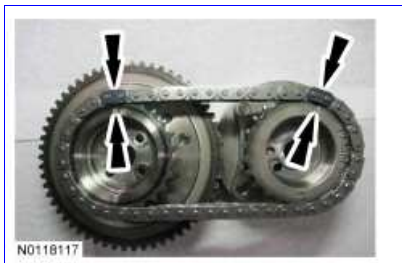

7. **NOTE:**It may be necessary to rotate the camshafts slightly, to install the RH secondary timing assembly.

Position the 2 RH VCTassemblies and secondary **timing chain** onto the camshafts by aligning the holes in the VCTassemblies with the dowel pins in the camshafts.



8. Install the 2 new RH VCTbolts and tighten in 4 stages.
- Stage 1: Tighten to 40 Nm (30 lb-ft).
  - Stage 2: Loosen one full turn.
  - Stage 3: Tighten to 25 Nm (18 lb-ft).
  - Stage 4: Tighten an additional 180 degrees.



9. Activate the RH secondary **timing chain** tensioner by pressing down on the secondary tensioner shoe until it bottoms out, let go of the tensioner and it will spring up putting tension on the chain.



10. **NOTICE: Do not use excessive force when installing the Variable Camshaft Timing (VCT) oil control solenoid. Damage to the mega cap could cause the cylinder head to be inoperable. If difficult to install the VCToil control solenoid, inspect the bore and VCToil control solenoid to ensure there are no burrs, sharp edges or contaminants present on the mating surface. Only clean the external surfaces as necessary.**

**NOTE:**A slight twisting motion will aid in the installation of the VCToil control solenoid.

**NOTE:**Keep the VCToil control solenoid clean of dirt and debris.

Install the RH exhaust VCToil control solenoid.

- Tighten to 8 Nm (71 lb-in) then an additional 20 degrees.



11. **NOTE:**Apply clean engine oil to the secondary **timing chain** tensioner O-ring seals and mega cap bore.

**NOTE:**Do not remove the secondary **timing chain** tensioner shipping clip, until instructed to do so.

Install the LH secondary **timing chain** tensioner by pushing it down all the way until a snap is heard and the tensioner is seated all the way down the mega cap bore.



12. Install the LH secondary **timing chain** tensioner shoe.



13. Remove and discard the LH secondary **timing chain** tensioner shipping clip.



14. Assemble the 2 LH VCTassemblies and the LH secondary **timing chain**.


- Align the colored links with the timing marks.



15. **NOTE:**It may be necessary to rotate the camshafts slightly, to install the LH secondary timing assembly.

Position the 2 LH VCTassemblies and secondary **timing chain** onto the camshafts by aligning the holes in the

VCTassemblies with the dowel pins in the camshafts.

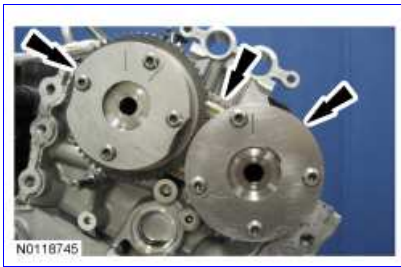

16. Install the 2 new LH VCTbolts and tighten in 4 stages.
- Stage 1: Tighten to 40 Nm (30 lb-ft).
  - Stage 2: Loosen one full turn.
  - Stage 3: Tighten to 25 Nm (18 lb-ft).
  - Stage 4: Tighten an additional 180 degrees.



17. Activate the LH secondary [timing chain](#) tensioner by pressing down on the secondary tensioner shoe until it bottoms out, let go of the tensioner and it will spring up putting tension on the chain.




18. **NOTICE: Do not use excessive force when installing the Variable [Camshaft Timing](#) (VCT) oil control solenoid. Damage to the mega cap could cause the cylinder head to be inoperable. If difficult to install the VCToil control solenoid, inspect the bore and VCToil control solenoid to ensure there are no burrs, sharp edges or contaminants present on the mating surface. Only clean the external surfaces as necessary.**

**NOTE:**A slight twisting motion will aid in the installation of the VCToil control solenoid.

**NOTE:**Keep the VCToil control solenoid clean of dirt and debris.


Install the LH exhaust VCToil control solenoid.

- Tighten to 8 Nm (71 lb-in) then an additional 20 degrees.

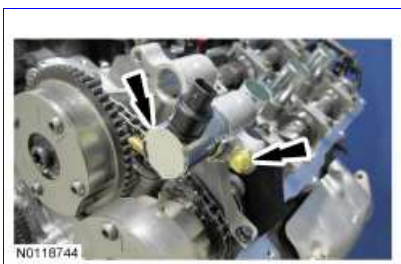


#### Engines with secondary [timing chain](#) tensioner not removed

19. Compress the RH secondary [timing chain](#) tensioner and install the Secondary Chain Hold Down to retain the tensioner in the collapsed position.

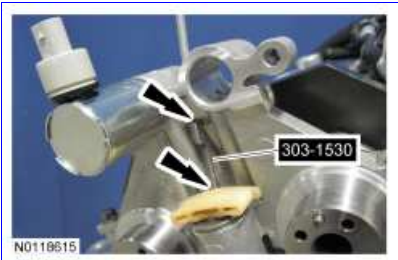


20. Assemble the RH VCTassembly, the RH exhaust camshaft sprocket and the RH secondary [timing chain](#).
- Align the colored links with the timing marks.

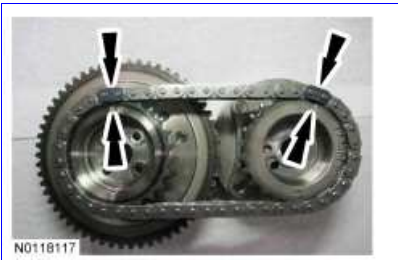


21. **NOTE:**It may be necessary to rotate the camshafts slightly, to install the RH secondary timing assembly.

Position the 2 RH VCTassemblies and secondary [timing chain](#) onto the camshafts by aligning the holes in the VCTassemblies with the dowel pins in the camshafts.

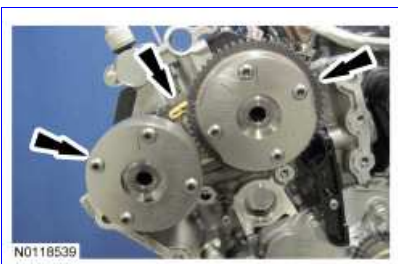

22. Install the 2 new RH VCTbolts and tighten in 4 stages.
- Stage 1: Tighten to 40 Nm (30 lb-ft).
  - Stage 2: Loosen one full turn.
  - Stage 3: Tighten to 25 Nm (18 lb-ft).
  - Stage 4: Tighten an additional 180 degrees.

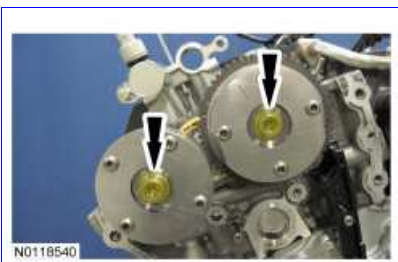


23. **NOTE:**The 2 VCToil control solenoids are removed for clarity.

Compress the RH secondary [timing chain](#) tensioner and remove the Secondary Chain Hold Down.

- Make sure the secondary [timing chain](#) is centered on the [timing chain](#) tensioner guides.



24. Compress the LH secondary [timing chain](#) tensioner and install the Secondary Chain Hold Down to retain the tensioner in the collapsed position.

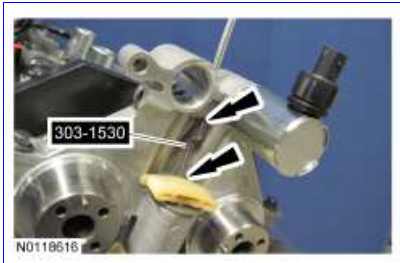

25. Assemble the 2 LH VCTassemblies and the LH secondary [timing chain](#).
- Align the colored links with the timing marks.




26. **NOTE:**It may be necessary to rotate the camshafts slightly, to install the LH secondary timing assembly.

Position the 2 LH VCTassemblies and secondary [timing chain](#) onto the camshafts by aligning the holes in the VCTassemblies with the dowel pins in the camshafts.



27. Install the 2 new LH VCTbolts and tighten in 4 stages.
- Stage 1: Tighten to 40 Nm (30 lb-ft).
  - Stage 2: Loosen one full turn.
  - Stage 3: Tighten to 25 Nm (18 lb-ft).
  - Stage 4: Tighten an additional 180 degrees.

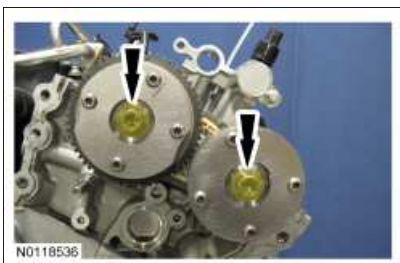

28. **NOTE:**The 2 VCToil control solenoids are removed for clarity.


Compress the LH secondary [timing chain](#) tensioner and remove the Secondary Chain Hold Down.

- Make sure the secondary [timing chain](#) is centered on the [timing chain](#) tensioner guides.



### All engines

29. Install the upper LH primary [timing chain](#) guide and the bolt.
- Tighten to 10 Nm (89 lb-in).

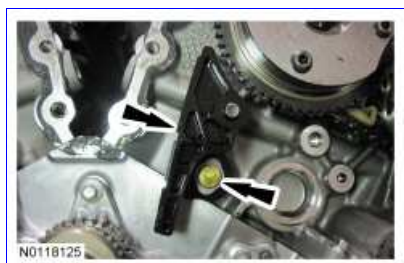

30. Install the crankshaft [timing chain](#) sprocket with timing dot mark out.



31. **NOTE:**It may be necessary to rotate the camshafts slightly, to align the timing marks.

Install the primary [timing chain](#) with the colored links aligned with the timing marks on the VCT assemblies and the crankshaft sprocket.



32. Install the lower LH primary [timing chain](#) guide and the 2 bolts.
- Tighten to 10 Nm (89 lb-in).





33. Install the primary **timing chain** tensioner arm.



34. Reset the primary **timing chain** tensioner.

- Release the ratchet detent.
- Using a soft-jawed vise, compress the ratchet plunger.
- Align the hole in the ratchet plunger with the hole in the tensioner housing.
- Install a suitable lockpin.




35. **NOTE:** It may be necessary to rotate the camshafts slightly to remove slack from the [timing chain](#) to install the tensioner.

Install the primary tensioner and the 2 bolts.

- Tighten to 10 Nm (89 lb-in).
- Remove the lockpin.



36. As a post-check, verify correct alignment of all timing marks.
- There are 48 links between the RH intake VCT assembly colored link (1) and the LH intake VCT assembly colored link (2).
  - There are 35 links between the LH intake VCT assembly colored link (2) and the 2 crankshaft sprocket links (3).

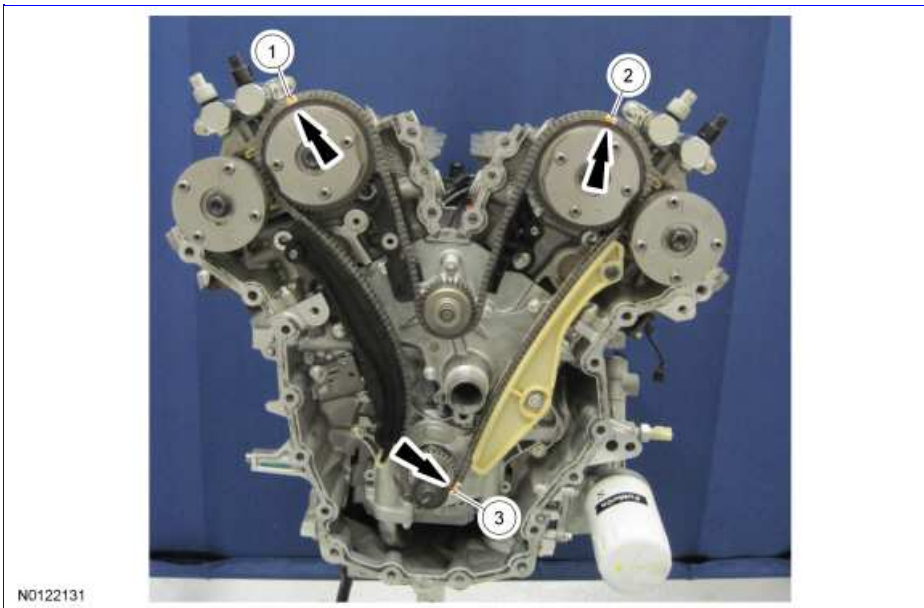

37. **NOTICE:** Do not use excessive force when installing the Variable [Camshaft Timing \(VCT\)](#) oil control solenoid. Damage to the mega cap could cause the cylinder head to be inoperable. If difficult to install the VCT oil control solenoid, inspect the bore and VCT oil control solenoid to ensure there are no burrs, sharp edges or contaminants present on the mating surface. Only clean the external surfaces as necessary.

**NOTE:** A slight twisting motion will aid in the installation of the VCT oil control solenoid.

**NOTE:** Keep the VCT oil control solenoid clean of dirt and debris.

Install the LH intake VCT oil control solenoid and the bolt.

- Tighten to 8 Nm (71 lb-in) then an additional 20 degrees.



38. **NOTICE:** Do not use excessive force when installing the Variable [Camshaft Timing \(VCT\)](#) oil control

**solenoid. Damage to the mega cap could cause the cylinder head to be inoperable. If difficult to install the VCToil control solenoid, inspect the bore and VCToil control solenoid to ensure there are no burrs, sharp edges or contaminants present on the mating surface. Only clean the external surfaces as necessary.**

**NOTE:**A slight twisting motion will aid in the installation of the VCToil control solenoid.

**NOTE:**Keep the VCToil control solenoid clean of dirt and debris.

Install the RH intake VCToil control solenoid and the bolt.

- Tighten to 8 Nm (71 lb-in) then an additional 20 degrees.



39. Remove the RH Camshaft Holding Tool.



40. Install the RH valve train oil tube and the 3 bolts and tighten in 2 stages.

- Stage 1: Tighten to 8 Nm (71 lb-in).
- Stage 2: Tighten an additional 45 degrees.




41. Remove the LH Camshaft Holding Tool.



42. Install the LH valve train oil tube and the 3 bolts and tighten in 2 stages.

- Stage 1: Tighten to 8 Nm (71 lb-in).
- Stage 2: Tighten an additional 45 degrees.

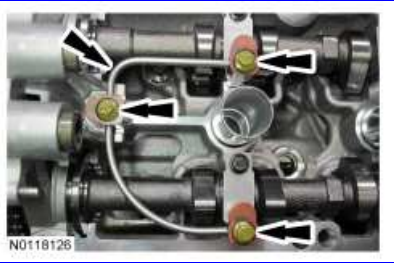

43. Install the engine front cover. For additional information, refer to [Engine Front Cover](#) in this section.

Copyright © 2014 Ford Motor Company

---

---

This publication contains material that is reproduced and distributed under a license from Ford Motor Company. No further reproduction or distribution of the Ford Motor Company material is allowed without the express written permission of Ford Motor Company.

Copyright 2007 - 2014 Service Repair Solutions, Inc.